













DESIGNER DIAMOND™ Technique Step by Step #5 - Vintage Stitches

1. Select Sewing Mode 
2. Touch Start Menu to open Extended Tool Bar. 
3. The Stitch Menu opens automatically. 
4. Select Menu J – Vintage Stitches 
5. Select J1:1 
6. Select Woven Medium on your Exclusive SEWING ADVISOR® menu on the lower tool bar. 
7. **Foot:** Indicates which foot to use 

8. **Needle:** Indicates what needle to use - *Universal 80* 

9. **Stabilizer:** Indicates that stabilizer is needed 

10. Touch the Quick Help. 

11. Touch Stabilizer.

12. A pop-up message will appear. “Stabilizer recommendation - Recommends using stabilizer under fabric.”

13. Touch OK 

14. Snap on the B foot.

15. Thread with 40 wt. rayon embroidery thread on top and bobbin thread in the bobbin.

16. Stitch the selected stitch.

17. Try some of the other stitches or create a new stitch pattern using Programming.

To Program Vintage Stitches:

1. Select Program 

2. Select a few Vintage stitches to create a stitch program.

3. Select Selective Thread Cutter Function Button. 

4. The DESIGNER DIAMOND™ sewing and embroidery machine will stitch one of each of the stitches programmed, cut the threads, and stop.

5. Step on the foot control and sew out the stitch program.

6. Select the U Menu My Stitches 

7. Touch an empty memory space to save your stitch program to My Stitches.