

 
# Clear B Edge Stitching Foot

1, 2, 3, 4, 5, 6, 7

Part Number 413 05 83-45



The Clear B Edge Stitching Foot guides decorative stitching along an edge perfectly. The tunnel on the bottom of the foot allows stitches to form perfectly and feed flawlessly. The flange along the edge of the foot keeps the distance between the edge of the fabric and the stitching consistent. Anytime your Sewing Advisor® or GraphicDisplay recommends the “B” foot, use the Clear B Edge Stitching Foot to sew along an edge.



1. Snap on the Clear B Edge Stitching Foot.
2. Place your project under the foot with the flange guide at the edge of the project.
3. Select the decorative stitch of your choice.
4. Sew.



 **Husqvarna**

**VIKING**