

Husqvarna Viking USB Embroidery Stick Usage:

A Husqvarna Viking USB Embroidery Stick functions like any other computer memory device, such as the Floppy Disk or your computer hard drive. Once plugged in to a Windows XP USB port it becomes an additional drive available to be saved to. You can even organize your designs in folders. Embroidery stitch files in the following formats can be transferred via Husqvarna Viking USB Memory Stick for use in your Designer SE: .VP3, .SHV, .DHV, .HUS, .VIP, .SP3 (stitch files), .VF3, .PEC, .PES, .XXX, .SEW, .JEF, .EXP, .DST, and .10*. Please insure your Husqvarna Viking USB Memory Stick is in the unlocked position before placing it in the computer. The instructions are in your Users Guide.

To locate the drive letter of your Husqvarna Viking USB Memory Stick:

1. Double Click on My Computer.
2. Note what is listed under “Devices with Removable Storage” and “Hard Disk Drives”.
3. Insert your Husqvarna Viking USB Memory Stick and allow the new hardware wizard to finish.
4. Note which drive has been added under “Devices with Removable Storage” or “Hard Disk Drives”.
5. This new drive is your Husqvarna Viking USB Memory Stick and it is ready to receive designs. Please note the drive letter.

To transfer designs from within 3D Embroidery Software:

1. With the design you would like to save open in the 3D software, click on the Save As



- icon .
2. Choose My Computer from the list on the left.
3. Choose the drive letter that represents your Husqvarna Viking USB Memory Stick.
4. Choose a folder if you wish.
5. Name the design.
6. Click Save.

The Design File is now saved on your Husqvarna Viking USB Memory Stick and ready for use in your Husqvarna Viking Designer SE.

To transfer designs from your Computer directly to the Husqvarna Viking USB Memory Stick:

1. In Explorer, locate the files you wish to transfer.
2. Right click on the design or folder if you wish to transfer the entire folder.
3. Choose Send To.
4. Select Your Husqvarna Viking USB Memory Stick.
5. A file transfer window “Copying...” may occur when it is finished your design(s) are transferred and ready to use.

Please remember to use the Safely Remove Hardware function before unplugging your Husqvarna Viking USB Memory Stick from the computer. More information on this function can be found in your Windows XP help files