


NEW! Fancy Trim Foot

#920055096


Snap on the transparent Husqvarna Viking Fancy Trim Accessory Foot to stitch narrow flat sequins, trims, ribbons, braids, and more, quickly and easily. The trims are fed through the foot smoothly eliminating the need to flatten them or guide them as you sew. The see-through foot makes it easy to see where you are stitching and to follow any marked guidelines.

1. Thread the top with clear invisible thread and use thread matching your background fabric in the bobbin or use a decorative thread on top as desired.
2. Slide trim into the opening at the front of the foot and pull it down under the foot along the groove on the underside of the foot. If the trim lays flatter in one direction than the other, as with sequin trim, feed the flat direction in to the foot.

Tip: Hold the foot upside down, slide the trim in slightly and use a straight pin to pull it beyond the length of the foot.

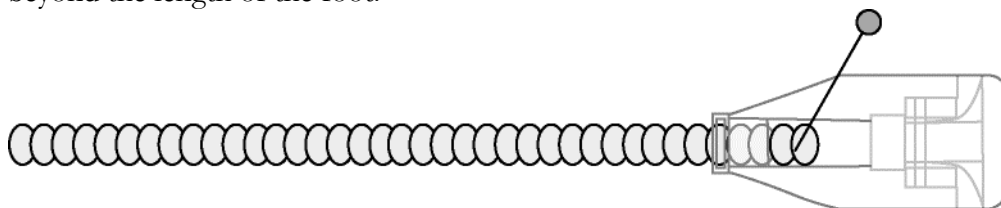

3. Snap the Fancy Trim Foot on to your Husqvarna Viking sewing machine.
4. Select a zig zag stitch or other decorative stitch with width. Practice on a fabric scrap. Adjust the width to stitch over the width of the trim. Adjust stitch length as desired. Lower top thread tension if needed so bobbin thread does not pull to the top.

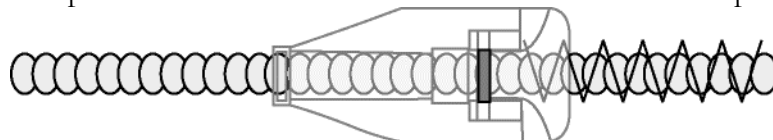

5. Stitch trim in place on garment or project.
- Twin Needle Option:** Topstitch flat ribbons and trims with a twin needle. Thread a twin needle just wide enough to catch the edges of your flat trim.

