

Magician Outfit

The Magician outfit is sewn in three parts: jogging outfit, cape and a hat.



Sewing Supplies

- Burda pattern 3689
 - Single jersey for jogging outfit according to Burda pattern
 - Fabric for cape 1 3/4 yds (1.60 cm) (or length of the cape x 2)
 - Red lining for cape 1 3/4 yds (1.60 cm) (or length of the cape x 2)
 - 6" (15 cm) black drawstring
 - 1/3 yard (30 cm) Golden fabric for stars appliqué
 - Fusible web (Vliesofix or Steam a Seam 2)
 - Black sewing thread
 - 5/8 yd (50 cm) felt
 - 5/8 yd (50 cm) Vlieseline or fusible interfacing
 - Tear-A-Way™ Stabilizer
- Optional:
- Husqvarna Viking Open Toe Foot (412 27 70-45)
 - Husqvarna Viking Edge Stitching Foot (412 40 77-45)

JOGGING OUTFIT

Cut and sew the jogging outfit according to the Burda instructions.

CAPE CUT

Fold the fabric for the cape double. Mark a neckline in the corner as illustrated. Measure the length of the child from the neck to desired length and mark needed length on the folded fabric + 3/8" (1 cm) seam allowance (A). Cut the cape in outer fabric and lining. (Illustration A).

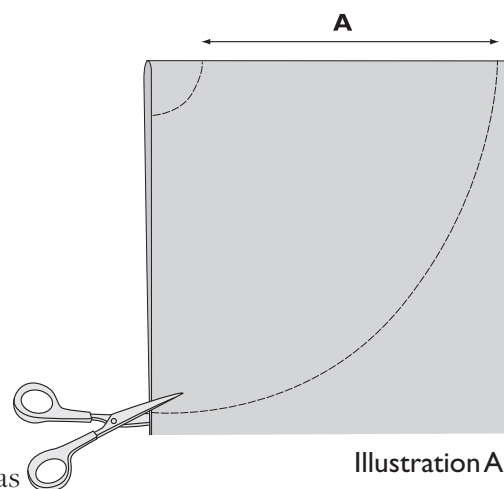


Illustration A.

SEW

Snap on presser foot B. Select 3 step zig zag. Overcast lining and cape on all sides.

Trace stars from the pattern in various sizes on the fusible web. Press to the wrong side of the golden fabric and cut out the stars. Fuse the stars randomly onto the cape. Select a narrow satin stitch, stitch length 0.2, width 2.0. Use presser foot B or the optional Open Toe Foot. Place stabilizer underneath the fabric and stitch all around the stars.

Pin the lining and the cape right sides together. Select straight stitch and snap on Presser Foot A. Stitch all around the cape leaving a 10" (25 cm) opening along the front edge and 3/4" (2 cm) wide opening 3/4" (2 cm) from the neckline on both front edges for the drawstring to be inserted as illustrated. (Illustration B).

Trim the seam allowance in the neckline and corners. Turn the cape right side out and press. Insert the drawstring in the 3/4" (2 cm) openings on the front and pin in place. Snap on presser foot A or the optional Edge Stitching Foot. Select right needle position straight stitch. Topstitch along the edge all around the cape.

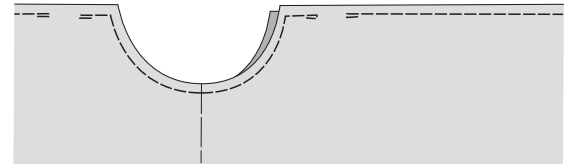


Illustration B.

HAT

CUT & SEW

Measure around the head of the child. Cut a side piece in felt, 7" (18 cm) high and width according to head-measurement. Add 5/8" (1.5 cm) seam allowance on all sides. Press fusible interfacing to the piece.

Snap on Presser Foot A and select straight stitch. Sew the short sides of the side piece, right sides together, to form a "tube". Press seam allowance open.

Cut out a brim by placing the "tube" on top of double fabric and drawing around the tube. Draw a larger circle for desired width of the brim. Add seam allowance inside and outside the brim and cut out. (Illustration C). Draw a top piece circle on fabric in the same way, add seam allowance and cut out. Press fusible interfacing on the wrong side.

Select a binding stitch $\frac{1}{4}$. Snap on presser foot J. Place the two brim pieces right sides together and sew together the edges.

Divide the edges of the "tube" and the top circle in four. Match the marks and pin the top circle to the tube piece, right sides together. (Illustration D).

Sew with presser foot A and straight stitch.

Stitch the brim to the side piece in the same way.

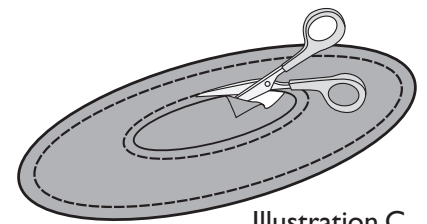


Illustration C.


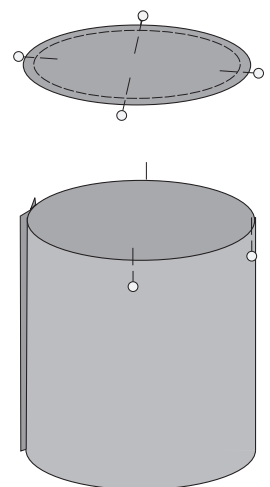


Illustration D.



 **Husqvarna**

VIKING

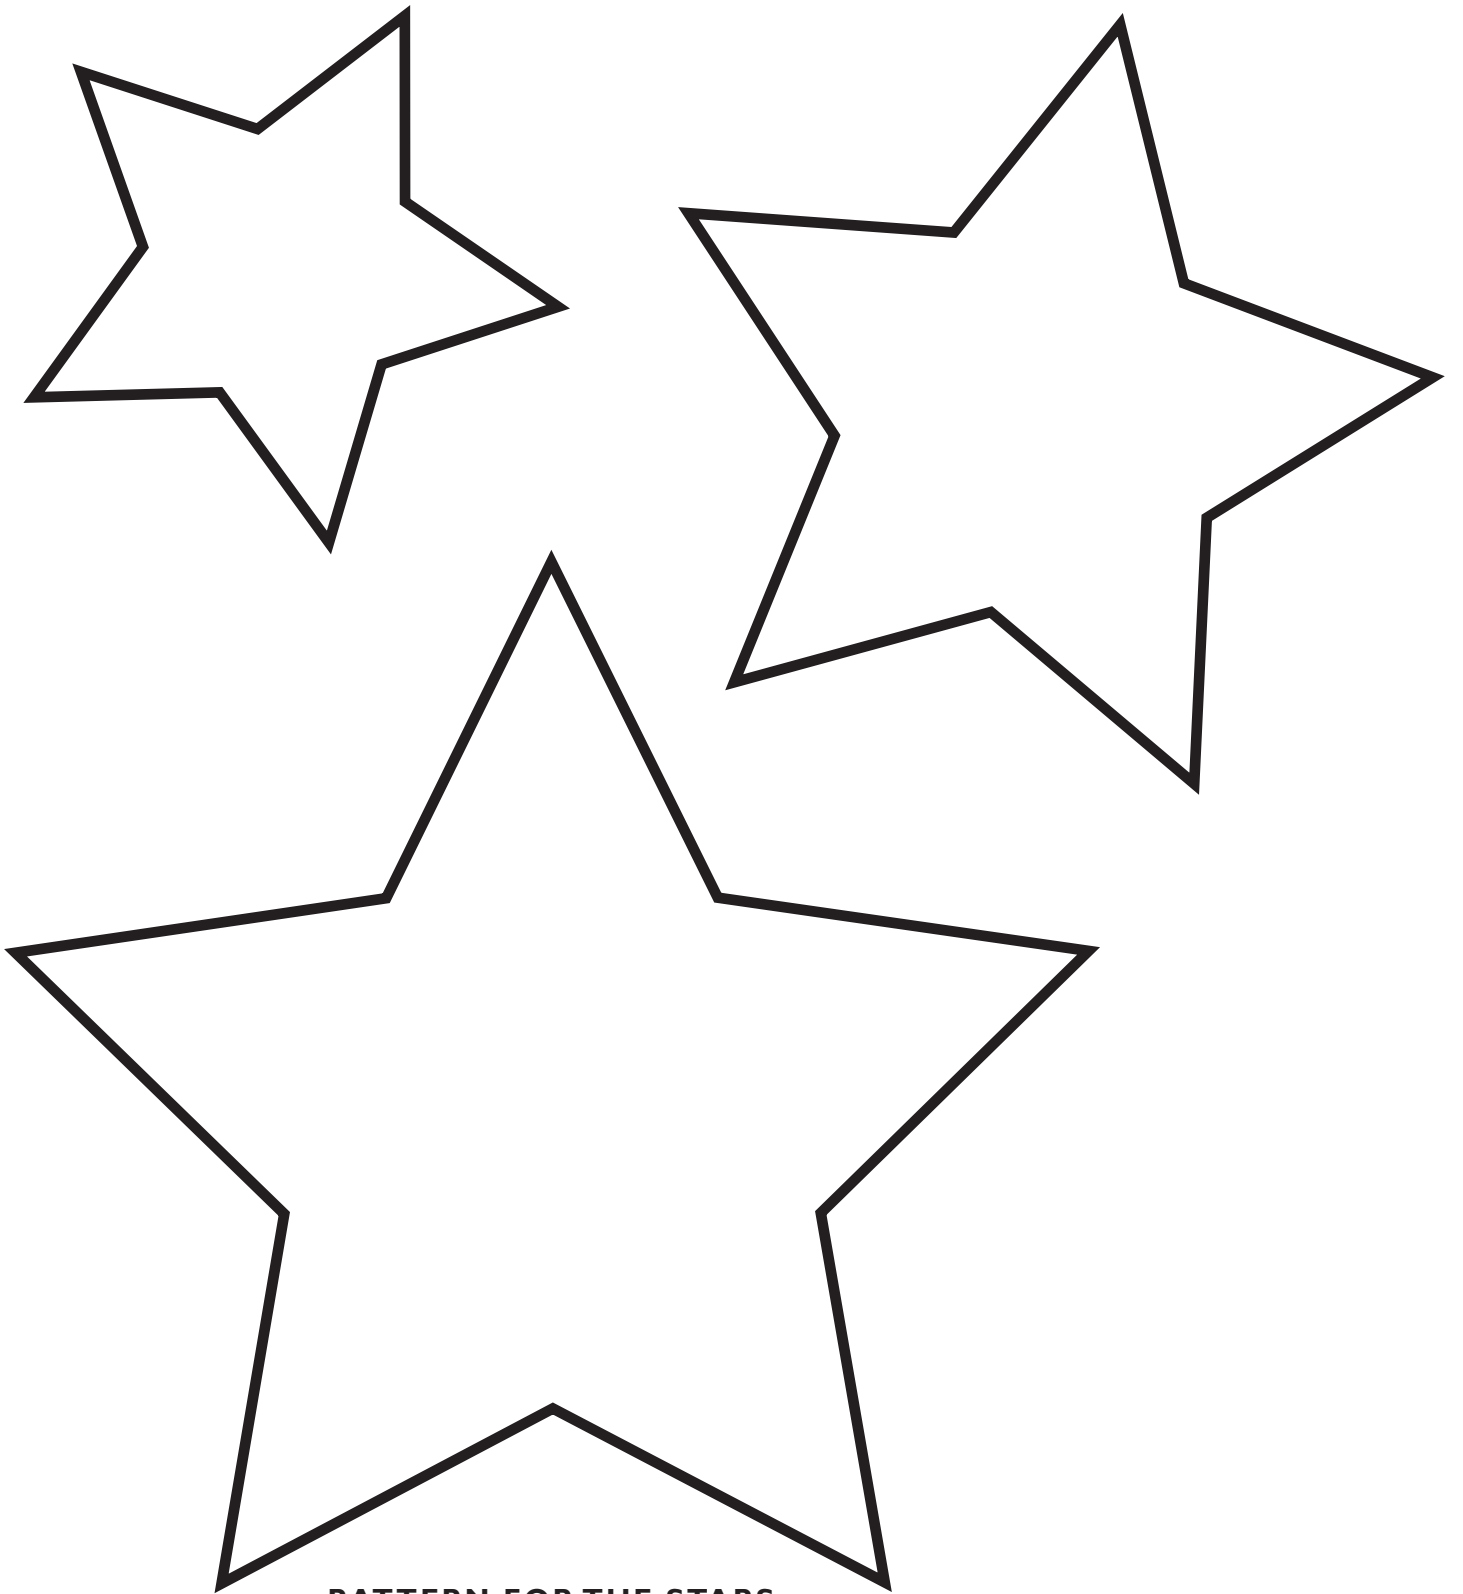

PATTERN FOR THE STARS