



Designer II Update 1.2

Function Buttons

 **FIX** is automatically activated when a stitch is selected or when the Selective Thread Cutter has been used. FIX is used to tie off stitches. The button lights up while the FIX function is active. By touching the lighted button the function can be turned off. When beginning to sew, Designer II sews a few tie off stitches and goes on with the selected stitch. Touch FIX while sewing and Designer II sews a few tie off stitches and stops automatically. The FIX function can be programmed.

 **Thread Cutter** is touched to cut the top and bobbin threads. If touched when the machine is not sewing, the threads are cut in the beginning of the following stitch. If the button is touched while sewing, the "STOP" button starts flashing and the threads are cut at the end of the current stitch. When the threads are cut, the presser foot and the needle are raised to the up position and the FIX function is activated. The Thread Cutter function can be programmed.

Optional Stitch d-Cards

Omnimotion Stitches, K₁ and K₂ (new)

The Omnimotion stitches on Stitch d-Card K₁ and K₂ can be sewn with a width of 35 mm. The 38 different stitches can be combined with each other in the PROG mode. The stitches are beautiful to use when decorating clothes and linen.

