


Designer I Update 1.2

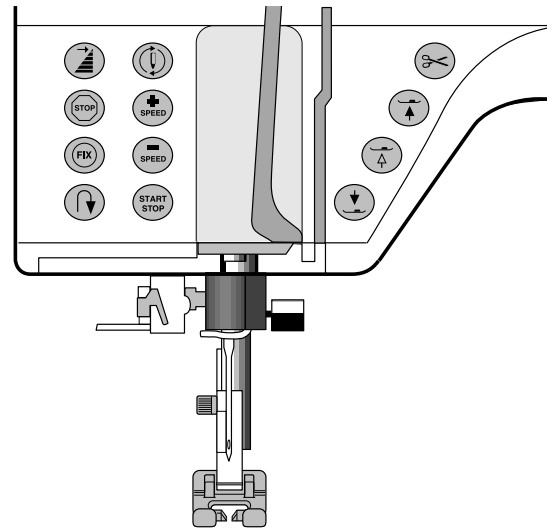


Thread Cutter. Touch the button and Designer I cuts the top and bobbin threads, raises the presser foot and the needle to the up position and activates the FIX function. To cut at the end of a single stitch pattern, touch CUT while the machine is sewing. A flashing STOP will indicate that a cut is requested.



Buttonhole Stitches

For Buttonhole stitches touch Menu B. There are 15 different styles of buttonholes. Stitch number 16 sews buttons in place and 17-19 sew eyelets. The red wheel to the left of the presser foot indicates the Sensor Button hole Foot. For buttonhole B6, Designer I recommends presser foot C. When sewing buttonhole B14 and B15, use presser foot A. When using the A or C presser foot, the symbol of the reverse button is visible on the screen. This prompts you to press the reverse button when the buttonhole has reached the desired length. The red arrow next to the buttonhole indicates the sewing direction.

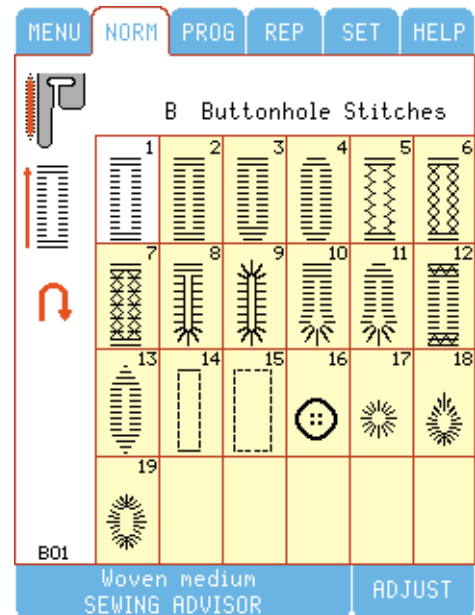


B7 Medium Reinforced Decorative Buttonhole for medium wool.

B9 Heirloom Buttonhole for "hand look" on fine and delicate fabrics.

B13 Decorative Fashion Buttonhole for most fabric weights.

B19 Oval eyelet for laces, embellishments.

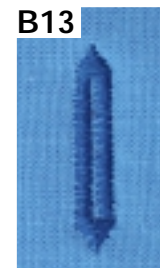


Omnimotion Stitches

For Omnimotion Stitches touch the Menu K in the Main Menu.

There are now 20 different Omnimotion stitches.

Omnimotion Stitches can be programmed with one another in the PROG mode. Sew the Omnimotion Stitch program in REP

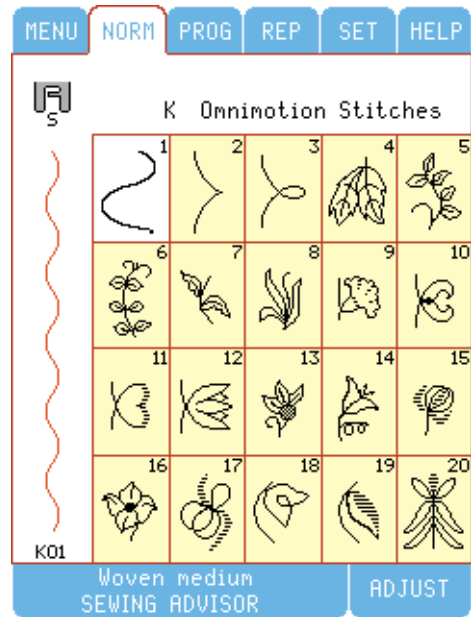

@-sign

To sew the @-sign, go to the third submenu in the O, P and R Lettering Menus.




Fix

Auto gives automatic stitch Fix, when new stitch is selected and after thread cutter is used.

Touch **Man** to cancel automatic Fix.


Sensor Q-foot

Touch **On** to set the sensor foot system to operate the optional Sensor Q-foot.

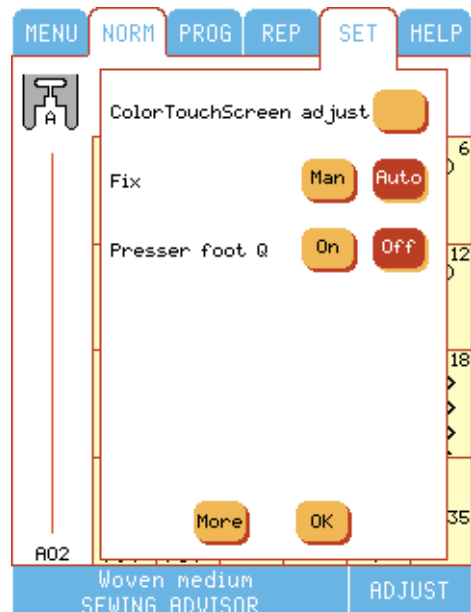

Adjust entire stitch program


Use **ADJUST** function in **REP** mode to change stitch length, stitch width and mirror image of the entire program. If you have programmed satin stitches **only**, you can adjust elongation too.

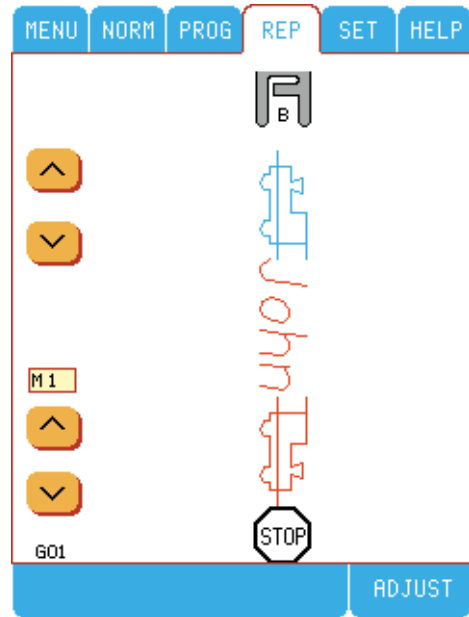


Hoop-size



Select the standard hoop as recommended. You can select a different hoop size from the orange buttons. The grey buttons are not available because the design would be too large for the hoop. Select the size of the hoop before sliding the hoop onto the embroidery arm. Be sure to use the selected hoop size as displayed on the screen. A sensor in the embroidery arm checks the size of the hoop so you will never make a mistake. The 40 x 40 "mini hoop", and the 360 x 150 "Mega Hoop" are optional accessories.

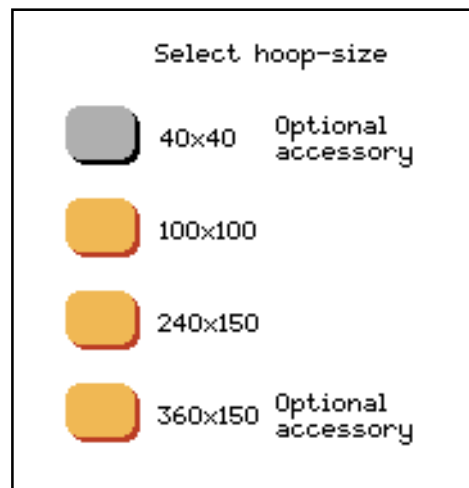

Starting position

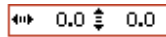 

The numbers indicates starting position of the design, in mm, from origin. When changed plus (+) indicates right and up, minus (-) down and left.

Tip: If you need to turn off your Designer I while stitching large embroidery, make notes of starting position, stitch number and color number. Then you can continue from the same position next time.

