
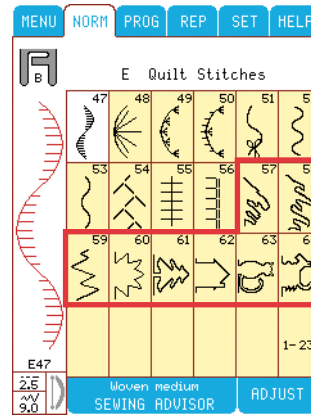


# Designer I USB Update 2.1

## Quilt Stitches

For Quilt Stitches, touch Menu E.

Stitch E1 sews the stitch 1/4" from the right edge of the presser foot. If you want a handlook quilting stitch, you can use stitch E2. Use stitch E24-26 for stippling sewing. There are also stitches that can be used for Crazy Quilting. The feather stitches (E7-12) are very typical for quilting. Stitches E3-6 are 6-9 mm wide and can be used when channel quilting.

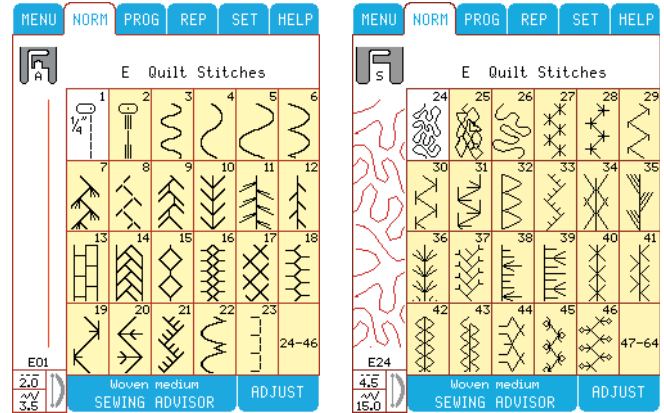

## Fashion Stitches

For Fashion Stitches touch Menu N in the Main Menu.

