

Designer I Update 1.5

Embroidery Disk Icon

View and load embroideries with your Designer I by sliding an embroidery disk into your Built-in disk drive. Touch the disk icon. This allows you to view the embroideries. To load an embroidery, your embroidery unit must be attached to your Designer I.

Quilt Stitches

For Quilt Stitches, touch Menu E.

Stitch E1 sews the stitch 1/4" from the right edge of the presser foot. If you want a handlook quilting stitch, you can use stitch E2. Use stitch E24-26 for stippling sewing. There are also stitches that can be used for Crazy Quilting. The feather stitches (E7-12) are very typical for quilting. Stitches E3-6 are 6-9 mm wide and can be used when channel quilting.

Scallop Stitches

For Scallop Stitches touch Menu H in the Main Menu.





The scallops 1-13 are Omnimotion scallops and sew up to 25 mm wide. Scallops 16-30 are up to 9mm wide.

Omnigram Stitches

For Omnigram Stitches touch the Menu K in the Main Menu.

These stitches are possible to combine with each other into an unlimited number of sequences.

Stitches 39-42 are sewn as a single pattern. After sewing one pattern your Designer I will fix the stitch and then stop.

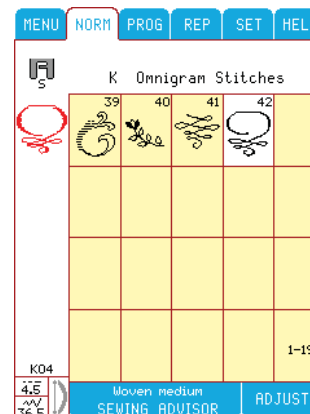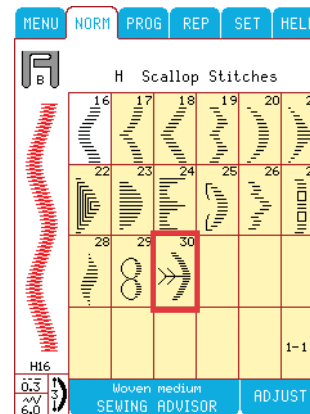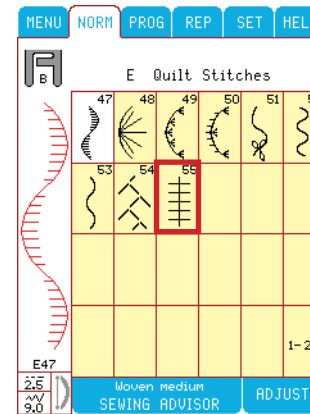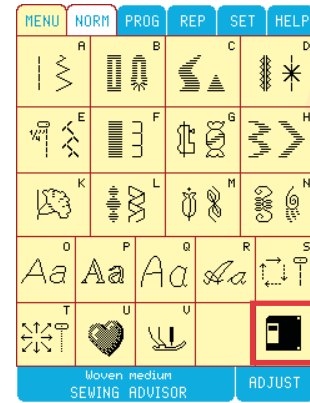

Fashion Stitches

For Fashion Stitches touch Menu N in the Main Menu.

Lettering

Your Designer I sewing machine features built-in letters and numbers, Menu O, Block alphabet, Menu P, Outline block, menu Q, Brush line and Menu R, Script alphabet.




My Stitches

On Menu U, you can customize a favorite stitch menu, saving your own personal settings for a stitch. This menu is called “My Stitches” (Menu U) and is shown on the Main Menu with a heart symbol. On “My Stitches” you can save 30 stitches with adjustments made in **ADJUST** (length, width, elongation and mirroring) and with settings made in **SET** (tension, balance and presser foot pressure). To save your favorite stitch/setting, go to **SET** and select **Save**. Menu U will pop-up. Touch the desired position for your stitch. The original stitch number is shown in brackets after the U stitch number.

Special Stitches

For free motion sewing, darning, quilting, basting and free hand embroidery touch Menu V. There are four stitch types available, V01, straight stitch, V02, zigzag and V03 and V04, basting stitches.

Use stitch V03 and V04 together with the foot control. If STOP button is canceled you will have automatic timing. Step on foot control and feed the fabric manually while the presser foot is up. V03 is a straight stitch and stitch V04 moves sideways.

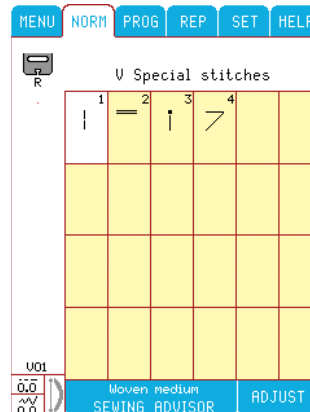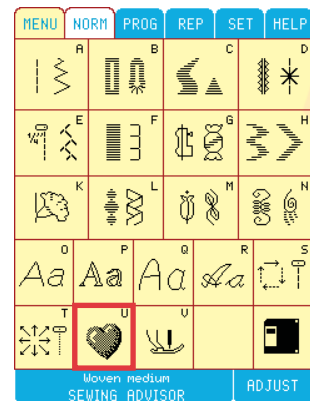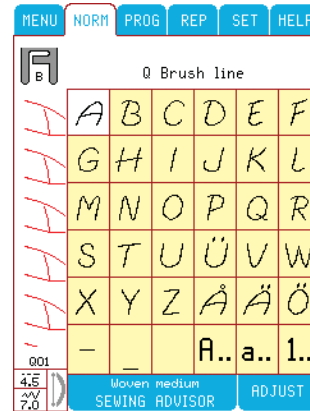

Stitch Width Safety

Touch **On** if you want to lock the needle side movements when using a straight stitch plate, a straight stitch foot or a 1/4" piecing foot P.

Free Motion

Touch **On** to turn all the stitches into free motion stitches.

Note: When using the free motion function, the feed teeth should be lowered.

Alarm repeat

Touch **On** to select a repeated alarm. Your Designer I will then repeat the signal for alarm pop ups while the machine is sewing.

Screen lock

To activate the screen lock, press **On**. When the screen lock is activated, the stitch selection buttons are not active. To unlock the screen lock, touch the key image in the upper right corner of the color touch screen.

Running time

In the set menu there is a stopwatch that will measure the machines running time. To reset the stopwatch, touch **→0**.

Pop-up menus



Stitch Width Safety

If you have been using a straight stitch plate (optional) or the P-foot and have set the stitch width safety, the Designer I alerts you when turning on the machine or when selecting a stitch that has stitch width more than 0.0.

Pop-up menus in Embroidery

Embroidery finished

When your embroidery is complete a pop-up menu will appear. Touch OK to get back to your embroidery

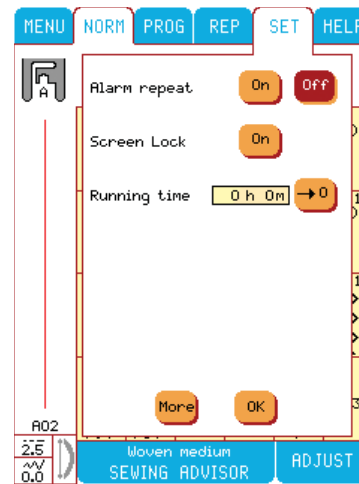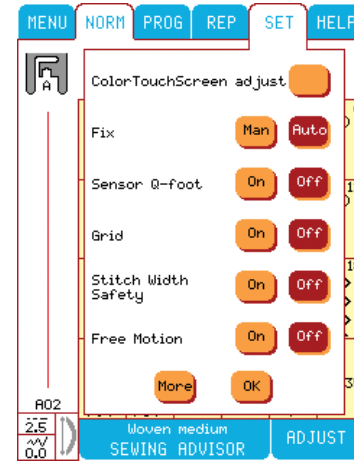


How to sew built-in stitches

To sew, select a stitch or a stitch program. To access the memories, touch **Load** in **REP**, and select desired memory.



Use the positioning arrows to position the starting point. The starting point **+** and sewing direction will be displayed on the Color Touch Screen. If you want to get back to the center, touch **0.0**.

To change stitch direction, stop sewing, touch **ADJUST**, touch the rotation icon . The built-in stitches can be rotated in 45° steps. Touch **OK** to see the stitch direction displayed.

Bartacks

Secure elastic ends, drapery pleats, belt loops, and pocket corners with the same look as ready-to-wear.



 

Fabric: Woven heavy

Touch: Woven heavy, Menu A, Utility Stitches, Touch Stitch A32.

Snap on: Presser Foot B as recommended.

Use: Size 80 needle as recommended

Sew:

- Place fabric in position under presser foot
- Touch Pivot  and adjust fabric if necessary. Step on the foot control, the Sensor Foot lowers automatically, and stitch. The machine will sew a straight stitch until you touch . Your Designer I will then sew in reverse until you touch  again. Your Designer I will then sew a zig zag, covering the straight stitches until you touch .
- The machine will automatically tie-off and cut the threads.

