



Photo Album Cover

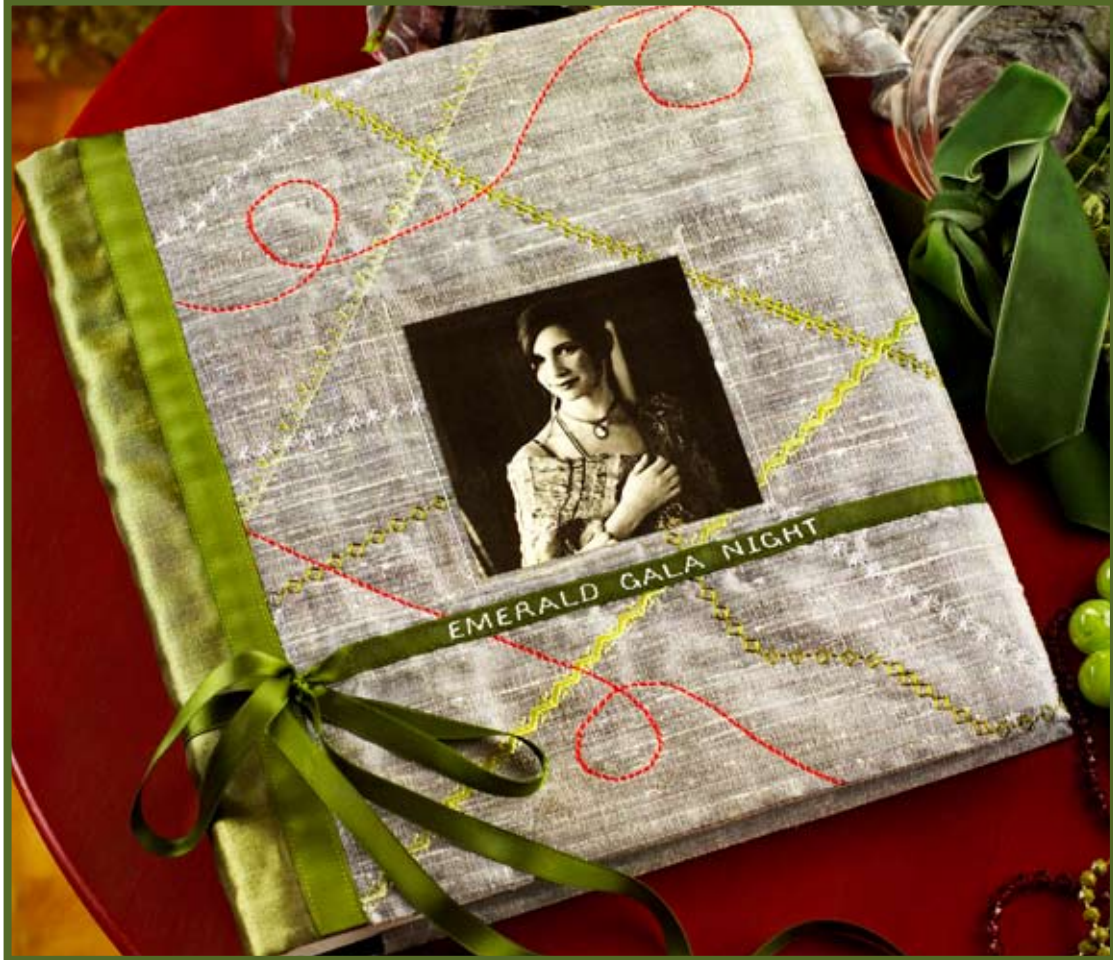

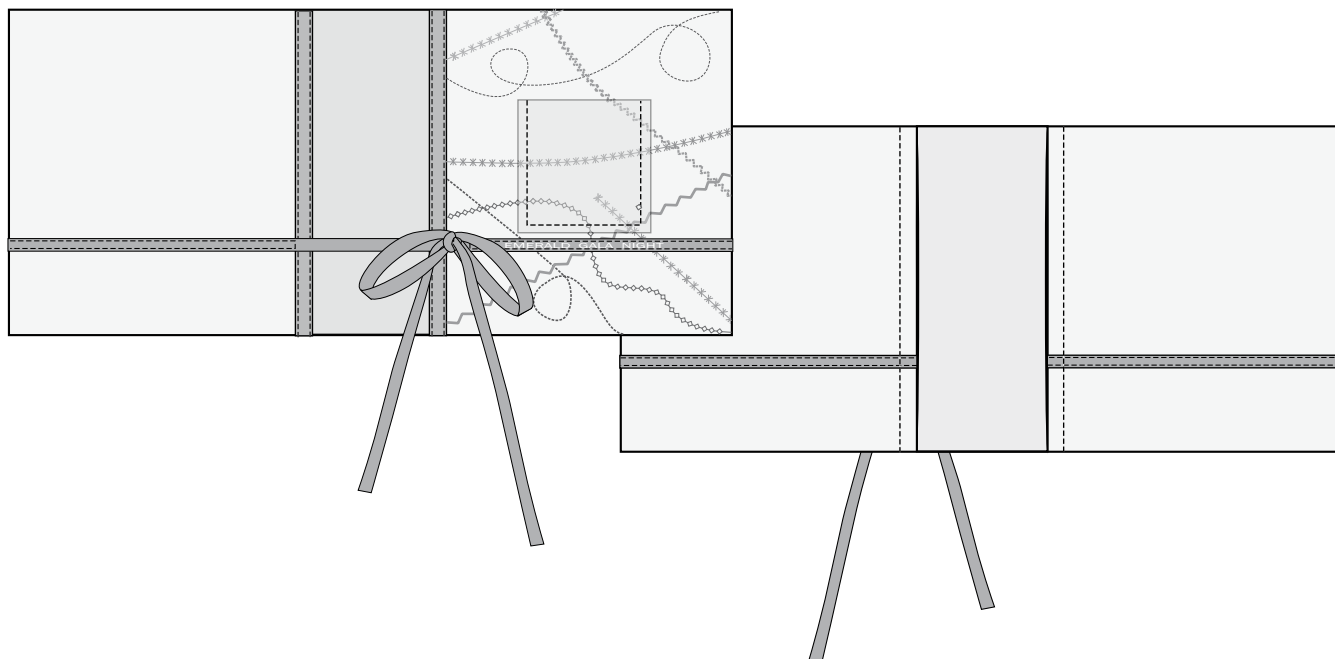

Sewing Supplies

Husqvarna Viking Sewing Machine with decorative stitches

Husqvarna Viking Huskylock (optional)

Photo Album 12 ¼" (31 cm) high x 11 ¼" (28,5 cm) wide

16" x 65" (40 cm x 150 cm) of grey Dupioni/Thai silk

6" x 15" (15 cm x 38 cm) of organza

1/8 yd. x 5" (12 cm x 13 cm) piece of plastic

4 1/2" x 4 1/2" (10 x 10cm) Photo size

12" x 24" (30,5 cm x 60 cm) of fusible batting

1/4 yard (71 cm) of 5/8" (1,5 cm) wide green ribbon

2 1/2 yards (2 m) of 3/8" (1 cm) wide green ribbon

40 wt. Embroidery thread in 4 different colors

Sewing thread matching the fabric and ribbon

Tear-A-Way™ Stabilizer

Husqvarna Viking Accessories

Edge/Joining Foot (412 79 68-45)

Non-Stick Glide Foot H (412 79 61-45) (included with the Emerald 183)

Left Edge Top Stitch Foot (412 78 42-45)

Pictogram Pen (412 08 38-48)

You can find these and many other accessories in the Husqvarna Viking Accessory User's Guide or on our website www.husqvarnaviking.com, for purchase at your nearest Husqvarna Viking Dealer.

5/8" (1,5 cm) seam allowance included in all measurements.

We used a Photo Album that measures 12 ¼" x 11 ¼" (31 x 28,5 cm). If you have a different size on your Album, measure it and add 5/8" (1,5 cm) seam allowance.

Cut

1 piece, 13" x 47" (34 cm x 117 cm) of Dupioni/Thai silk for outer piece

1 piece, 8 1/2" x 13" (22 x 34 cm) of Dupioni/Thai silk for inner piece

1 piece, 12" x 24" (30,5 cm x 60 cm) of fusible batting

1 piece, 4" x 3/8 yd. (10 cm x 35 cm) of organza

2 pieces, 3/8 yd. (35 cm) of 5/8" (1,5 cm) wide green ribbon

2 pieces, 40" (1 m) of 3/8" (1 cm) wide green ribbon


Sewing

Finish all edges of the outer and inner piece with a three step zigzag or Huskylock.

Mark the middle of the outer piece and the fusible batting. Place the batting on the wrong side of the outer piece of the fabric matching the markings. Press the batting in place.

On the right side of the fabric mark with your Pictogram Pen $2\frac{1}{4}$ " (5,5 cm) from the middle on both sides lengthwise. Mark again 9" (23 cm) from the first mark on one side that will be the front of the Album. See ill. A


Ill. A

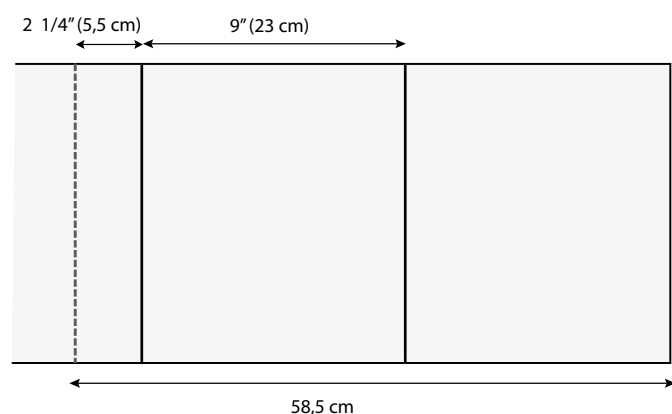

Select decorative stitches and follow the recommendations on the InfoDisplay to stitch the decorative stitches on the front piece between the two markings. Use different colors of the embroidery thread.

Measure 7" (18 cm) from the spine of the Album to the middle of the front side and $6\frac{1}{4}$ " (15,5 cm) from the lower edge and mark. Place the middle of the plastic piece on top of the marking. Snap on the Non-Stick Glide Foot H and sew the plastic in place on three sides with a straight stitch leaving the upper edge open to insert the picture later. See ill. B


Ill. B

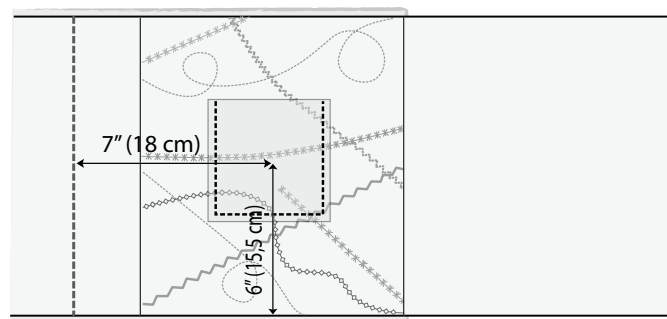

Pin the organza onto the middle of the front side which will be at the spine of the Album. Snap on presser foot B and sew the organza in place close to the edge on both sides lengthwise.

Pin one piece of $\frac{5}{8}$ " (1,5 cm) wide ribbon onto the edge of the organza. Snap on the Left Edge Top Stitch Foot. Adjust the straight stitch needle position 2 mm to the left (using the width setting) and sew with a straight stitch, stitch length 2, on both sides of the ribbon. Repeat for the other side. See ill. C

Ill. C

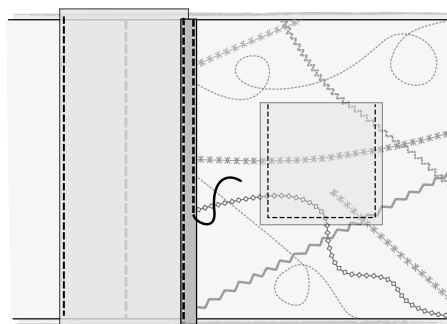

Snap on presser foot B. Baste one piece of the $\frac{3}{8}$ " (1 cm) wide ribbon to a piece of stabilizer along the edges, or put the ribbon and the stabilizer into a hoop to hold the ribbon taut for stitching the letters. Program the lettering of your choice into a memory and stitch on the ribbon. Tear away the stabilizer.


Tip! Stitch your lettering on a scrap of fabric first and measure how long your lettering will be so you know where to start the stitching on the ribbon to fit the front side of the Album. See ill. D

Ill. D



Snap on the Left Edge Top Stitch Foot. Pin the ribbon with the lettering on the front side of the album $3\frac{1}{2}$ " (9 cm) from the lower edge. Adjust the needle 2 mm to the left and sew with a straight stitch, stitch length 2 mm, on both sides of the ribbon. Stop before the vertical ribbon and leave the rest of the ribbon hanging, about 33" (85 cm). Repeat for the back of the album cover. See ill. E

Ill. E

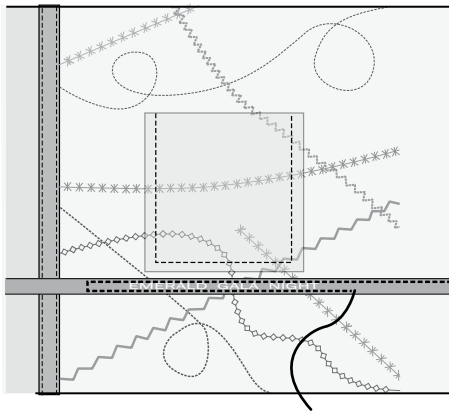

Turn right side out with the 9 1/2" (24 cm) flaps on each side and press.

Slide the Photo Album inside the cover. Tie the ribbons and put a nice photo inside the plastic pocket on the front cover.


Fold a double 3/8" (1 cm) hem to the wrong side along the short edges of the album cover. Sew with a straight stitch and press.

For a perfect narrow topstitched hem, snap on the Left Edge Top Stitch Foot and adjust the needle position 2 mm to the left.

Snap on presser foot B.

To create the ends that slide over the binder flaps and hold the album cover in place, fold 9 1/2" (24 cm) on each end of the album cover to the right side. See ill. F

Ill. F

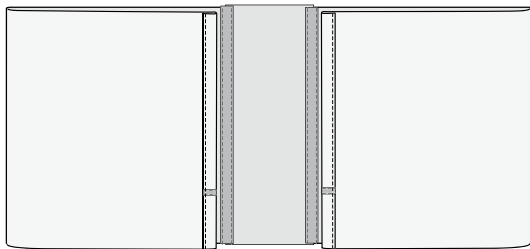

To finish the inside of the album cover, place the 8 1/2" x 13" (22 x 34 cm) inner piece right side down centered on top of the flaps you just folded back. Sew with a straight stitch on the upper and lower edge. See ill. G

Ill. G

