


Quilt Designer Update 1.1

Function Buttons

 **FIX** is automatically activated when a stitch is selected. FIX is used to tie off stitches. The button lights up while the FIX function is active. By touching the lighted button the function can be turned off. When beginning to sew, Quilt Designer sews a few tie off stitches and goes on with the selected stitch. Touch FIX while sewing and Quilt Designer sews a few tie off stitches and stops automatically. The FIX function can be programmed.

Optional Stitch d-Cards

Omnimotion Stitches, K₁ and K₂ (new)

The Omnimotion stitches on Stitch d-Card K₁ and K₂ can be sewn with a width of 35 mm. The 38 different stitches can be combined with each other in the PROG mode. The stitches are beautiful to use when decorating clothes and linen.

