



Christmas Card Pocket



Sewing Supplies

- Designer I or Designer II
- 3/8 yd. (30 cm) of red flannel
- Sewing thread
- Two pieces of cardboard, 3 1/2" x 8 3/4" (9 x 22.5 cm) and 10 3/8" x 8 3/4" (26.5 x 22.5 cm)
- Sulky 40 wt. Embroidery thread
- Tear Away™ stabilizer
- 2 large eyelets
- Husqvarna Viking disk/d-Card 110, Happy Holidays by Natalie Sorenson
- Designer I Sampler 100 (Designer II: Embroidery d-Card 100: 3, 4, Alphabet 412 65 79-01)

CUT

Cut one piece from flannel, 12" x 31 5/8" (30 x 80 cm).

EMBROIDER

Combine the words Merry Christmas in 20 mm size, with design 1 directly on your Touch Screen if you are a Designer I owner, or embroider the words and the design one by one if you are a Designer II owner. Hoop the fabric with the embroidery center point 8 3/8" (21 cm) from a short edge of the fabric piece. Embroider the design with tear away stabilizer underneath the fabric. Illustration A.

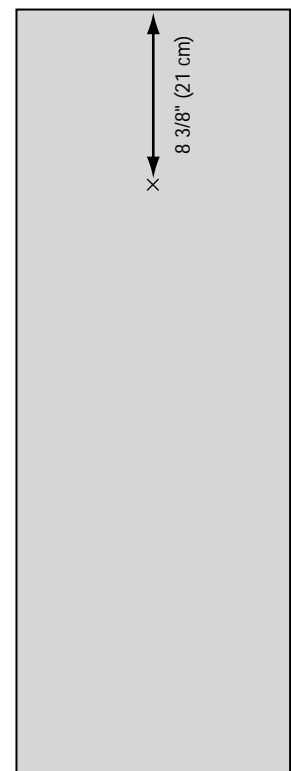 


Illustration A.

SEW

 
Rethread with sewing thread on top and in the bobbin.

Cut down to 9 1/4" x 31 5/8" (23.5 x 80 cm).

Fold the piece into a card pocket as illustrated. (Fold 3 1/4" (8 cm) above the embroidery to the wrong side. Then fold the embroidery 10 5/8" (27 cm) up. Fold the back side short edge 4" (10 cm) down. Pin the sides. Illustration B.

Rethread with sewing thread on top and in the bobbin. Snap on presser foot A. Select an appliqué stitch the heirloom appliqué stitch (DI: F11, DII, QD: Stitch d-Card E1, stitch 23). Sew the sides through all layers.

Insert the card board pieces and attach eyelets in the upper corners through all layers.

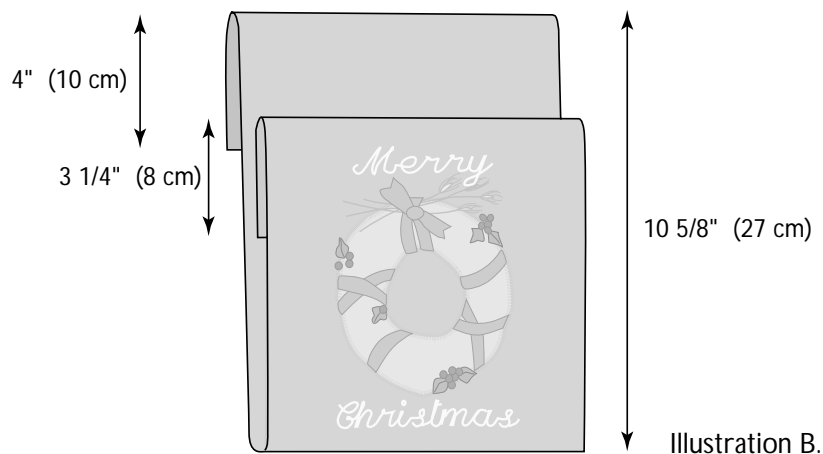

 **Husqvarna**

VIKING