


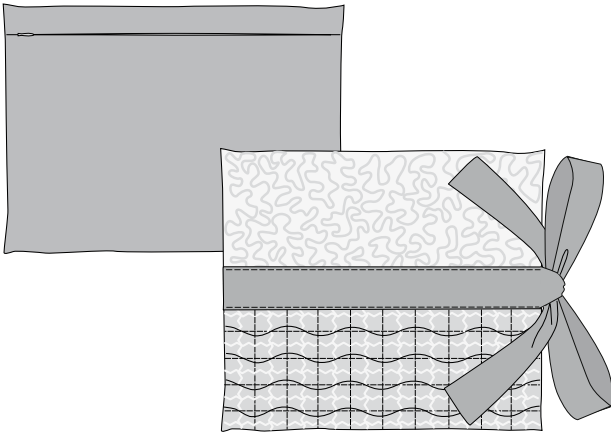

*Designer Topaz™*  
Special Technique Cushion



You will find these and many other accessories in your HUSQVARNA VIKING® Accessory User's Guide or on the web site [www.husqvarnaviking.com](http://www.husqvarnaviking.com), for purchase at your nearest HUSQVARNA VIKING® Dealer.

3/8" (1cm) seam allowance included in all measurement

### *Cut*

#### **From Turquoise fabric:**

- Front side – one piece 10" x 20" (25cm x 50cm)
- Back side – one piece 14" x 20" (35cm x 50cm)  
one piece 2 ¾" x 20" (7cm x 50cm)

#### **From Gold fabric:**

- Front side – one piece 8 3/8" x 20" (21cm x 50cm)


#### **From Red fabric:**

- Front side – one piece 2 ¾" x 20" (7cm x 50cm)
- Bow – two pieces 4 ½" x 32" (12cm x 80cm)

### *Embellish*

Draw lines on the front turquoise piece with the pictogram pen to mark a grid 2" x 2" (5cm x 5 cm) squares on the entire fabric piece. Illustration 1

Snap on the B foot. Thread the top and bobbin with gold embroidery thread. Select heirloom stitch 44 on menu 3. Sew the first row of stitching on the marked line on the left side of the fabric and continue on all the other marked lines.

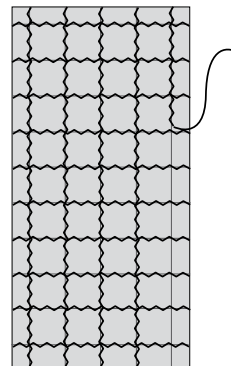

Sewing level 2


### *Sewing supplies*

- ❖ HUSQVARNA VIKING® DESIGNER TOPAZ™
- ❖ HUSQVARNA VIKING® Huskylock (optional)
- ❖ 5/8 yard of 55" wide ( 50cm x 140cm) Turquoise silk fabric
- ❖ 3/8 yard of 55" wide ( 25cm x 140 cm) Gold silk fabric
- ❖ ½ yard of 55" wide Red silk fabric ( 30cm x 140cm)
- ❖ Batting 8" x 20" (20cm x 140cm)
- ❖ Zipper 16" ( 40 cm)
- ❖ Pillow Form
- ❖ Gold Yarn
- ❖ Tear-Away stabilizer
- ❖ Interfacing
- ❖ Pins
- ❖ Embroidery thread
- ❖ Embroidery bobbin thread
- ❖ Sewing Thread to match the fabric


### *Husquarna Viking® Accessories*

- Pictogram Pen™ (412 08 38-48)
- Yarn Couching Feet Set ( 920 215-096 )
- Edge/Joining Foot (412 79 68-45)
- Edge Stitching Foot (412 79 67-45)
- Invisible Zipper Foot ( 412 68 70 -45)
- Fasturn Set ( 412 55 08 -45)


Draw a new line in-between the squares and repeat 4 times as illustrated. Snap on the Edge Stitching Foot and select a straight stitch. Thread with sewing thread, top and bobbin.

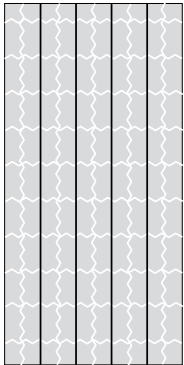

Fold the fabric along the marked line wrong side together and sew a straight stitch on the right side of the fabric placing the flange on the edge of the foot along the fold to create a tuck. Stitch a tuck on the other marked lines. Press all the tucks in one direction.

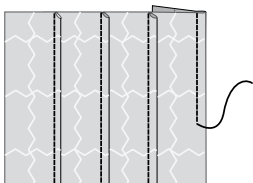

Snap on the A foot. Sew the tucks in place with a straight stitch seam and fold each row in different directions as illustrated to create “flip-flop” tucks..

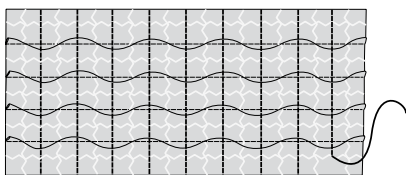


Press the fusible batting on the wrong side of the gold fabric.

Snap on the Yarn Couching Foot and set your DESIGNER TOPAZ™ for Free Motion sewing . In the SET menu select free motion floating. Thread the top and bobbin with sewing thread. Thread the gold yarn through the Yarn Couching Foot following manufacturers’ instructions. Fill the golden fabric piece with Yarn Couching stippling stitches.

## Sew


Pin one of long side of the gold and turquoise front pieces right side together. Snap on the A foot. Thread the top and bobbin with matching sewing thread. Sew the two pieces together with a straight stitch.

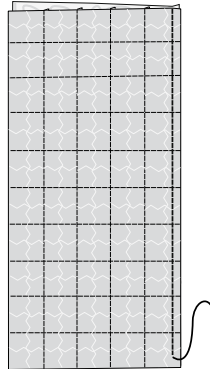


Start with the red 2 ¾" x 20" (7cm x 50cm) strip. Pin and press 3/8" (1cm) to the wrong side along the long sides of the strip.



Pin the red strip onto the two embellished front pieces. Snap on the Edge/Joining Foot and adjust the needle position. Thread the top and bobbin with matching sewing thread. Sew the strip in place.

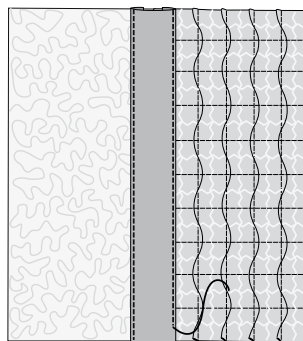

Fold and pin the red bow strip, lengthwise right sides together. Snap on the A foot. Straight stitch with a  $\frac{1}{4}$ " seam along one short side and the long side. Use the Fasturn tube turner to turn right side out. Repeat on the other bow strip. Press and pin in place on the embellished front side. Sew in place with straight stitch.

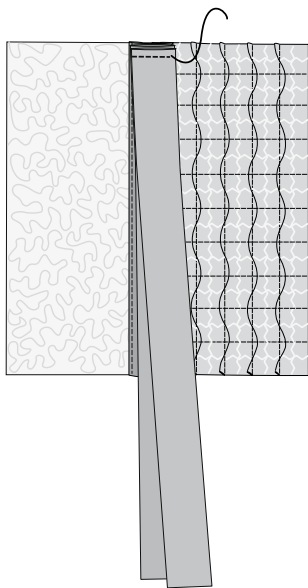

Snap on the Invisible Zipper Foot. Sew the invisible zipper between the long edges of the back pieces. For instructions how to sew an invisible zipper see Accessory User's Guide.

Place the front piece on top of the back piece, right sides together, pin in place. Open the zipper enough to turn the cushion right side out. Snap on the Clear Seam Guide Foot, select Woven Medium, Seam on the Sewing Advisor and sew around all four sides. Overcast the edges with a 4-thread overlock or select Overcast on the Topaz Sewing Advisor. Trim the corners and turn right side out through the open zipper.

Insert the pillow form.