

Husqvarna Viking Adjustable Bias Binder Foot

#412 9850-45

1, 2, 3, 4, 5, 6, 7

- Stitch 1/4" to 3/4" wide bindings quickly and easily in one step with the Husqvarna Viking Adjustable Bias Binder Foot.
- Use purchased double fold bias tape or make your own with the Clover Bias Tape Maker.
 1. Thread with matching thread on top and bobbin.
 2. Loosen the screw at the right side of the bracket to adjust the width of the opening for the finished size of your binding.
 3. Cut the end of the binding on a 45 degree angle and slide the binding into the foot with one side above the fabric slot and one below. (Note: purchased double fold bias tape has one side slightly wider than the other. Put the wider side on the bottom.) Pull binding under the presser foot.
 4. Snap adjustable bias binder onto your Husqvarna Viking sewing machine.
 5. Place the fabric to be bound into the fabric slot and pull fabric into the binding under the foot just beyond the needle.
 6. Select desired stitch. Select a straight stitch, zigzag or decorative stitch to stitch on and off the binding edge. Loosen the screw on the top, in the back of the foot and adjust the bracket as needed.
 7. Sew slowly, keeping the fabric to be bound, snugly in the groove as you sew.

