



Curtain

Designed and created by:
Anna Haraldsson and Kerstin Alriksgård.

Use your HUSQVARNA VIKING® sewing machine to create this curtain embellished with buttons! Here are some hints for sewing a beautiful curtain for every room in your house. Adjust the measurements to fit your window. Our curtain measures 88" (220 cm) x 28" (70 cm). Level: I

SEWINGSUPPLIES

- HUSQVARNA VIKING® sewing machine
- 2 3/4 yd. (250 cm) of 30" (76 cm) wide orange fabric for curtain
- Sewing thread to match the fabric
- 4 buttons 1 1/8" (30 mm)
- Fusible interfacing

CUT

Fabric

Cut one rectangle 60" (250 cm) x 30" (76 cm) for the curtain or the size needed for your window.
Cut four strips 13 1/2" (34 cm) x 3" (7 cm) for the hanging loops.

INTERFACING

Cut four strips 12 1/2" (32 cm) x 2" (5 cm) for the hanging loops. Cut one

strip 28 1/2" (72 cm) x 3" (8 cm) or length needed for your window.

3/8" (1 cm) seam allowance included in all measurements.

SEW

Fuse the long strip of interfacing on the wrong side of the upper edge of the curtain. Leave 3/8" (1 cm) for seam allowance on the top un-interfaced.

Turn under a double 3/8" (1 cm) hem on the edges and press. Select straight stitch and topstitch.


Hem the curtain. Turn under the lower edge 4" (10 cm) twice and press. Topstitch in place.

Sew the hanging loops: Fuse the smaller strips of interfacing to wrong side in the middle of the orange strips. Fold the strips lengthwise, right sides together. Press. Sew the long side and one short side. Trim seam allowance and turn right side out. Press. Topstitch the short edge closed and continue all around.

Sew the buttonhole on the hanging loop. Snap on the Buttonhole Foot. Select a buttonhole. Begin sewing

3/4" (2 cm) from the edge. Sew a buttonhole, to fit your button, at one end of the hanging loop.

Place the loops (buttonhole downwards) on the upper edge of the right side of the curtain and pin. The right side of the buttonhole should be up. Stitch in place as a rectangle 3 1/2" (9 cm) x 2" (4,5 cm).

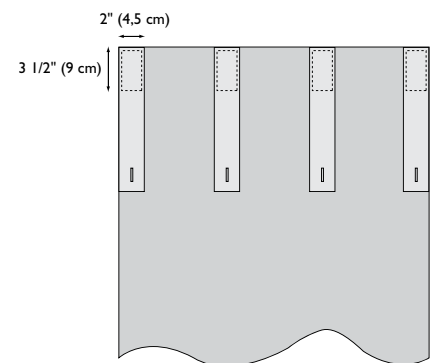

On the top edge, turn under 3/8" (1 cm) and then 3" (8 cm) and press. Stitch in place.

Follow instructions for button sewing in your Users Guide and stitch the buttons in place.