

INSTRUCTIONS - how to download and unzip the files

Designer I:

1. Click on the link "Designer I format" to start the download.
2. Save the zipped file in a folder of your choice or to a 3.5" diskette.
3. Find the file and double click on it to unzip the file. The file is an .exe-file and is selfextracting.
4. Click OK in the first dialogue box.
5. Click on "unzip" and save the files on to an empty 3.5" diskette and the design is ready to use in your Husqvarna Viking Designer I. The design will always be in Menu 1, position 1, so be sure to use an empty diskette.

Orchidea #1+, Rose and Iris:

To save the files on a programmable card you need to have the Husqvarna Viking Reader/Writer program installed on your computer.

1. Click on the link ending with .zip to start the download.
2. Save the zipped file in a folder of your choice or to a 3.5" diskette.
3. Find the file and double click on it to unzip the file. You will need a program on your computer that will decompress zip files (such as WinZip or similar program).
4. Save the unzipped file (.hus) to a 3.5" disk or on your hard drive.
5. Close the unzip program.
6. Insert a programmable card in your Reader/Writer unit.
7. Start Reader/Writer and open the unzipped file (.hus).
8. Click on "Write Card" and the file will be saved on the programmable card and is now ready for use in your sewing machine.

Quilt Designer II and Platinum 950 E

To save the files on a Personal d-Card you need to have the Husqvarna Viking d-Card Reader/Writer program installed on your computer.

1. Click on the link ending with .zip to start the download.
2. Save the zipped file in a folder of your choice or to a 3.5" diskette.
3. Find the file and double click on it to unzip the file. You will need a program on your computer that will decompress zip files (such as WinZip or similar program).
4. Save the unzipped file (.hus) to a 3.5" disk or on your hard drive.
5. Close the unzip program.
6. Insert a Personal d-Card in your d-Card Reader/Writer unit.
7. Start VIP d-Card Reader/Writer and open the unzipped file (.hus).
8. Click on "Write d-Card" and the file will be saved on the Personal d-Card and is now ready for use in your sewing machine.