




autodigitizing

Getting Started

Adjustments: Cross Fill

1. Open autodigitizing, or click New Design  to get a blank screen if autodigitizing is already open.
2. Set Display Preferences, selecting hoop size for a 100 mm design.
3. Click the Insert Image  icon.
Insert
C:/autodigitizing/artwork/BigRose
4. Leave all Shape Depiction settings at default and click OK.
5. Generate Stitches.
6. Click the spool to select all objects with a running outline.
7. Open the Area Properties  sheet. (Spacebar or Properties icon.)
8. Click in the circle in front of the Cross Fill option.
9. Change Cross Cell size to 1.5. Leave a check in front of Outline With Running Stitch. Leave cross rotation at 45.
10. Generate.
11. Click on the Outline View icon in the bottom tool bar.
12. Select Outline/Form Line from Area Border.
13. In the properties box, select Outside Border.
14. Change Offset to 0.4.
15. Leave the other settings at default and click OK.
16. Generate.
17. Save as CrossRose, then Export as CrossRose.

