


## Placemat 1 - Four colors

Designed by Tineke Pot, The Netherlands

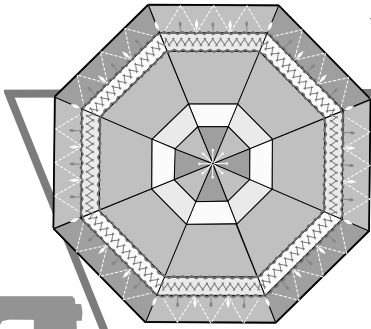

### Sewing Supplies

(For one placemat)

- Husqvarna Viking Sewing machine
- 1/8 yd (10 cm) dark red thai silk fabric 35" (90 cm) wide
- 1/8 yd (10 cm) red thai silk fabric 35" (90 cm) wide
- 1/8 yd (10 cm) dark beige thai silk fabric 35" (90 cm) wide
- 1/8 yd (10 cm) light beige thai silk fabric 35" (90 cm) wide
- Cotton fabric for back of placemat, 17 3/4" square (45 x 45 cm)
- Vlieseline™ Thermolam 272 fusible fleece, 40" x 17 3/4" (100 x 45 cm) for interfacing
- Sewing thread
- Red 30 wt. embroidery thread
- Gold metallic thread
- Red metallic thread
- Embroidery needle size 90 (412 40 22-01)
- Husqvarna Viking Grid Marker™ (412 66 18-01)

Optional:

- Open Toe Foot (412 27 70-45)
- Rotary Cutter, ruler and cutting mat (See the Accessory User's Guide).

1/4" (6 mm) seam allowance included in all measurements.


### CUT

- From dark red fabric, 1 strip 35 1/2" x 2 1/8" (90 x 5,5 cm)
- From beige fabric, 1 strip 35 1/2" x 1.5" (90 x 4 cm)
- From red fabric, 1 strip 35 1/2" x 3" (90 x 7,5 cm)
- From dark beige fabric, 1 strip 35 1/2" x 1.5" (90 x 4 cm)
- From red fabric, 1 strip 35 1/2" x 2 1/8" (90 x 5,5 cm).


### SEW

Thread your sewing machine with regular sewing thread on top and in the bobbin. Snap on presser foot A. Select straight stitch. Place the colors in order according to the cutting list above. Sew the strips together. Press the seam allowances open.

Trace the template on to pattern paper. Cut out. Place the paper pattern on top of the pieced fabric as illustrated and cut out 8 pieces.

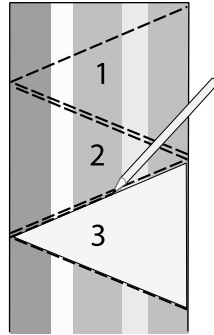

Sew the triangles together to form an octagon. Press the seam allowances to one side. Fold the fleece double so it measures 20" x 17 3/4" (50 x 45 cm). Cut the fleece in the same shape as the top piece but leave out the 1/4" (6 mm) seam allowance. Place the top piece on top of the two pieces of fleece. Make sure the silk is absolutely flat and "baste" with a few safety pins. With a pictogram pen, draw a zigzag pattern along the outer edge of the placemat. Make sure the outer points of the zigzag pattern ends 1/4" (6 mm) from the outer edge.

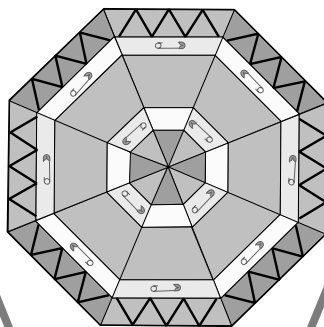


Rethread with gold metallic thread on top and regular sewing thread in the bobbin. Insert an embroidery needle, size 90. Snap on presser foot A or the optional Open Toe Foot for better visibility, and sew through all layers with straight stitch along the markings.

Select a decorative stitch and sew in the middle of the second strip from the outer edge, all the way around the placemat. We used stitch (DI: E45, DII, QD: E219).

To program a single diamond stitch on a Husqvarna Viking sewing machine Designer series. Touch PROG and choose in this order: stitch , , , (DI: C2, C23 and C2), (DII, QD: C12, C123, C12), mirror image end to end and STOP. Touch REP and sew between the sewn golden triangles. If you do not have the possibility to program stitches stitch one sequence of your favorite stitch or use a tapered satin stitch.

Program 5 straight stitches and a ball stitch. Or select a stitch of your own choice. Sew one sequence of this stitch from the middle of the placemat and out, one on each triangle. Sew a single ball stitch in the middle.

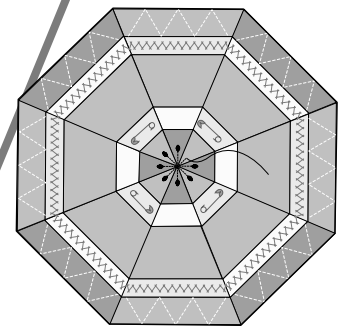

Rethread with the red metallic thread on top and stitch between the triangles on the outer edge strip.

Rethread with red embroidery thread on top, insert a regular needle and select stitch (DI: N17, DII, QD: N117), or a decorative stitch of your choice. Stitch on both sides of the second strip from the outer edge, all around the placemat.

Cut a back for the placemat from the cotton fabric. Place the back piece on top of the placemat, right sides together. Rethread with regular sewing thread on top. Snap on presser foot A and sew with straight stitch around the placemat using 1/4" (6 mm) seam allowance. Leave a 5" (12 cm) opening for turning.

Turn and press.