

# Remote Control Organizer



*A Remote Control organizer is a splendid way to keep all the remote controls in a order. Place it over your sofa so they are easy to reach without having them scattered around.*

*Finished size with loops: 29" x 20" (73 x 51 cm)*

## **SEWING SUPPLIES**

*7/8 yd. (70 cm) plastic coated fabric, at least 59" (150 cm) wide*

*10" (25 cm) linen fabric, at least 45" (114 cm) wide*

*2/3 yd. (60 cm) cotton fabric on fabric width 55" (140 cm)*

*Polyester Sewing thread*

*Sulky 40 wt. Rayon Embroidery thread in matching color*

*10" (25 cm) fusible interfacing for pockets*

*Pictogram pen*

*Pinking Shears*

*Optional accessories:*

*Edge Stitching Foot (412 40 77-45)*

*3/8" (1 cm) seam allowance included in all measurements.*

Print the pdf-file with the letters or make the letters in your computer in a suitable size, (height approximately 4 1/4" (4.5 cm) and cut them out as small letter templates.

## CUT

From plastic coated fabric:

Front piece 21" x 28" (53 x 70 cm)

7 strips, 3 1/4" x 6 1/2" (8 x 16 cm) for loops

Letters for the words: STEREO, VIDEO, TV (cut with pinking shears)

From cotton fabric:

Back piece: 21" x 28" (53 x 70 cm)

2 rectangular pieces, 21" x 8 1/2" (53 x 21 cm) for upper pocket and pocket lining

From linen fabric:

2 rectangular pieces, 21" x 8 1/2" (53 x 22 cm) for lower pocket and pocket lining

From fusible interfacing:


1 piece, 21" x 8 3/8" (53 x 21 cm) for upper pocket

1 piece, 21" x 8 1/2" (53 x 22 cm) for lower pocket

## SEW

Lower pocket:

Press fusible interfacing onto the wrong side of the pocket. Place the outside pocket with the lining pocket piece, right side together. Sew the upper edge. Turn to the right side and press.

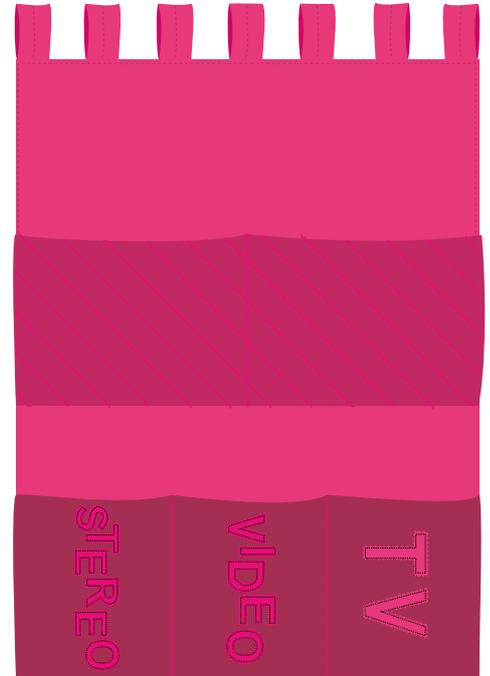


Place the templates on the plastic coated fabric and trace around the letters with a Pictogram pen. Cut them out with a pinking shears. Place the letters and attach them to the pocket with a fabric gluestick. Snap on presser foot A and sew them with straight stitch 2.5.




#### Upper pocket:

Press fusible interfacing on the wrong side of the upper pocket. Draw diagonal lines on the pocket with a Pictogram pen. Set your sewing machine for reinforced zigzag, stitch width 2.5. Sew diagonal seams all over the pocket, following the lines.

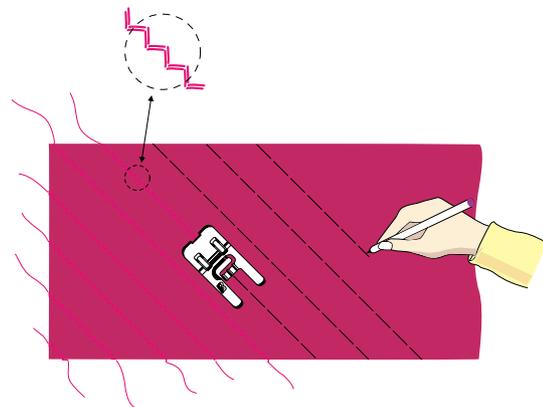


Place the outside pocket with the lining pocket piece, right side together. Sew the upper edge. Turn to the right side and press.

Place the lower edge of the upper pocket 12" (30 cm) from the lower edge of the front piece, right sides together. Sew the lower pocket edge to the front piece with straight stitch, length 2.5.

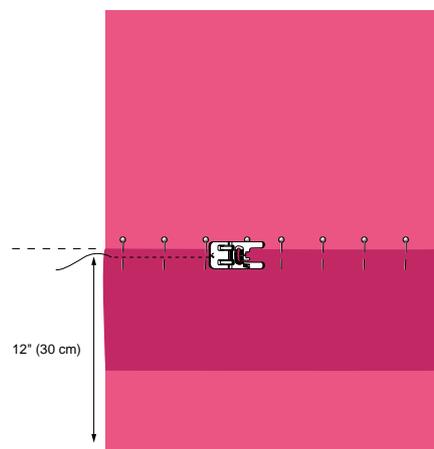

Fold up the pocket and press. Stitch the pocket into two pockets by sewing with reinforced zigzag, stitch width 2.5 in the middle of the pocket.

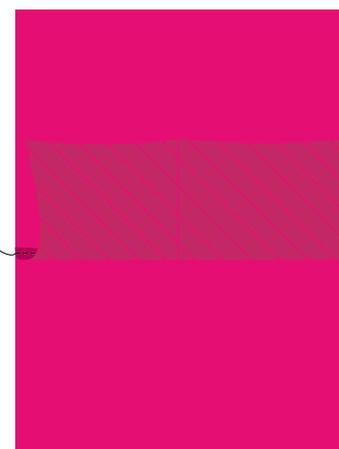


 Husqvarna

VIKING

### Lower pocket:

Place the lower pocket right side up, on the front piece matching the lower edge. To stitch it into three pockets, sew a reinforced zig zag vertically between the words.

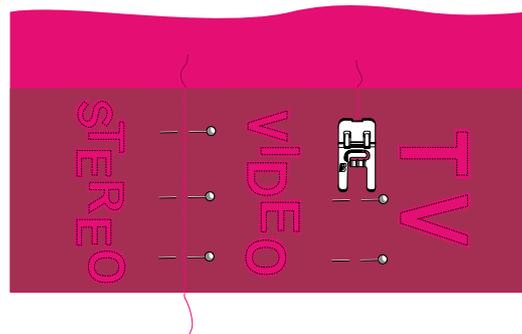


### Loops:


Fold the (8 x 16 cm) stripes triple lengthwise for the loops, and sew a straight stitch in the center.

Place the backpiece wrong side up. Fold the loops double and place them along the upper edge with even spaces.

Sandwich the loops along the upper edge between the back and frontpiece right sides together, as illustrated.

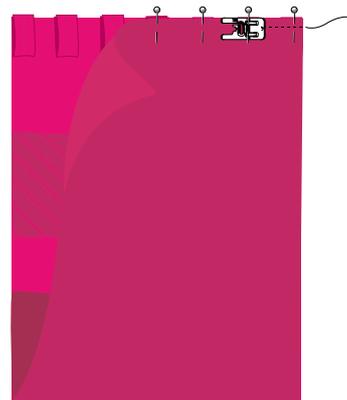

Sew all around the organizer leaving an opening on the left side between the upper pocket and the upper edge.

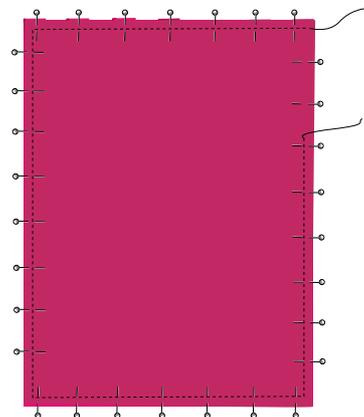

Turn the organizer right side out and press.

Sew the opening closed and strengthen the loops by top stitching from the upper pocket edge, along the upper edge of the organizer and down to the pocket again. Use presser foot A or the optional Edge Stitching Foot with a flange on the outer edge. It helps you to sew even top stitches. The Edge Stitching Foot (Available at your Husqvarna Viking Dealer.) helps you to sew even topstitches

Put a stick through the loops and hang the Remote Control Organizer over your sofa.



 Husqvarna

VIKING

**TV**

**VIDEO**

**STEREO**