

## Rope Coasters

by Meredith McClanahan



Create a one of a kind coaster set to add to your holiday decor or create a personalized set to gift a host when going to a holiday party.

## Shopping List:

- HUSQVARNA<sup>®</sup> VIKING<sup>®</sup> Sewing Machine
- Open Toe Foot:
  - Machine Group 1-8: Part #412800945
  - Machine Group 9: Part #920564096
- Clear Open Toe Foot - Part #413031945
- Clothesline Braided Cotton Rope
- Cotton Sewing Thread
- HUSQVARNA<sup>®</sup> VIKING<sup>®</sup> Denim Needles Size 90/14: Part #920660096
- Scissors

## Optional:

- HUSQVARNA<sup>®</sup> VIKING<sup>®</sup> Embroidery Needles 90/14: Part #920665096
- Embroidery Thread
- INSPIRA<sup>®</sup> Tear-A-Way Stabilizer 12" x 25yds: Part #620112296
- Faux Leather Scraps
- Cotton Fabric Scraps - 1" strips

## Machine Preparation:

1. Attach the Open Toe Foot.
2. Insert a HUSQVARNA® VIKING® Denim Size 90/14 needle into your machine.
3. Thread with cotton sewing thread & also in the bobbin.
4. Select a zig zag stitch with a stitch width of 4.5.



## Instructions:


1. Take one end of the cording & turn it around on itself about 1/2”.



2. Roll it around once more to start to create a small spiral.




3. Start sewing a zig zag stitch between each cord multiple times to secure the center of the coaster.

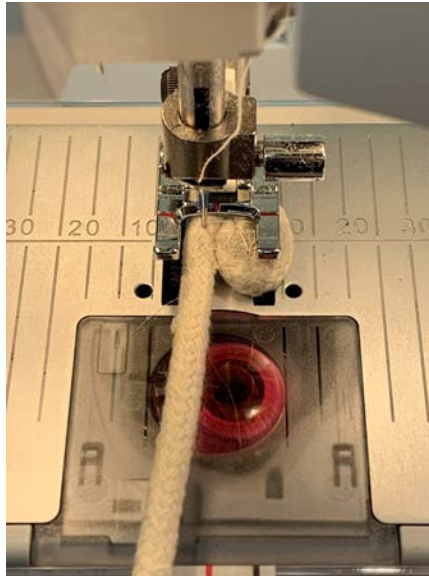

4. Once the center is secured, start turning the roll in on itself, sewing a zig zag between each cord.

Helpful Tip: Line up the space between each cord with the center red line on the open toe foot as you turn the coaster.

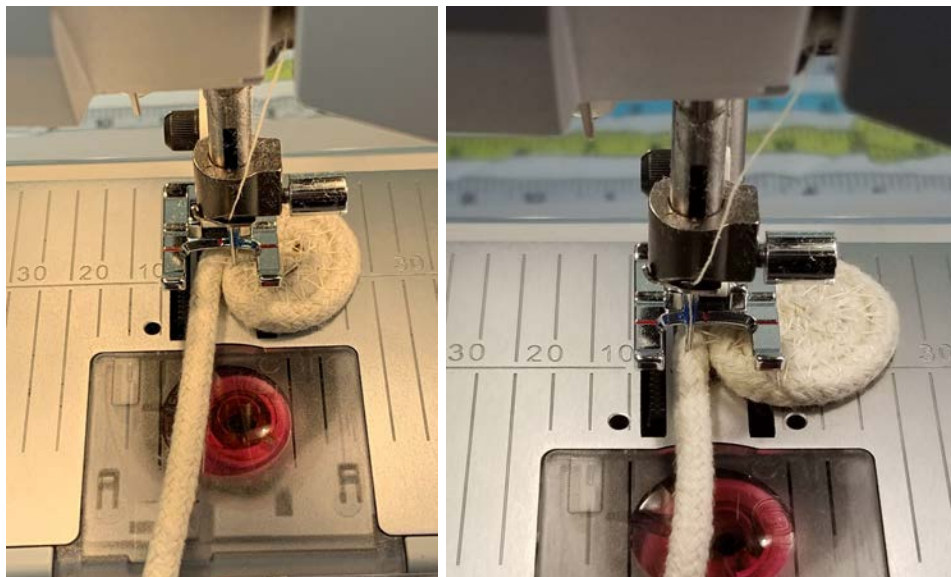



5. Continue this process until you have the size you're looking for. We made our coasters 4½" in diameter.






6. When you get to the end there a few ways to finish the coaster:
- You can cut the cord & line it up with the end of the coaster. Zig zag back & forth to lock in the tail & leave as is.



- You can cut a 3" tail prior to attaching to the coaster & fold it inward on itself to create a loop at the end & leave as is.

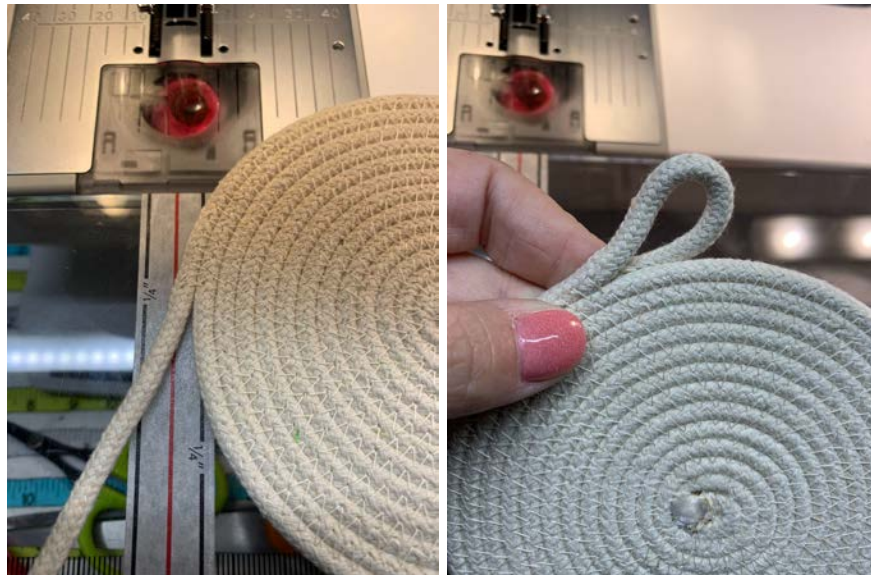



- c. You can complete step a & b & add a 1"x1" scrap piece of faux leather folded over to hide the cord tail. Attach with a straight stitch with a 2.5 length.







There are many finishing possibilities!

Optional Embroidery:

1. If you have an embroidery machine using a HUSQVARNA® VIKING® Embroidery Size 90/14 needle & INSPIRA® tear-a-way stabilizer you can add personalization to the center of the coaster.



Optional Fabric Scraps Added:

1. Repeat steps 1-4 from the beginning of the instructions.
2. Once you get going, wrap a 1" strip of cotton fabric around the cord.



3. Continue rolling the coaster in on itself & attach with a zig zag stitch.

