



## DESIGNER DIAMOND™ Technique Step by Step #21 – Specialty Technique Stitches Menu

1. Select Sewing Mode



2. Touch Start Menu to open Extended Tool



Bar.



3. The Stitch Menu opens automatically.



4. Select Menu X – Specialty Technique Stitches




5. As of the \_\_\_ update for the DESIGNER DIAMOND™ sewing and embroidery machine, there are new stitches available on the Specialty Stitches Menu. Specialty Techniques are stitches that require an optional accessory foot.

6. Let's look at what we have now. Stitches 1 through 10 are Candlewicking stitches.

7. Touch



8. Touch Stitch 6

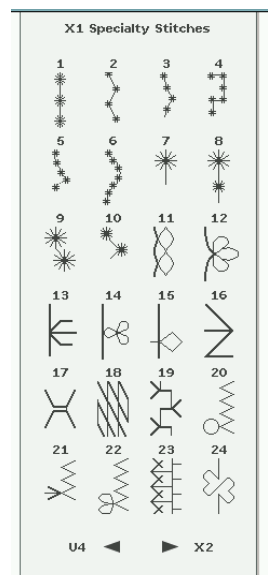

9. You get the pop-up with the information, including the part number, for the foot that you are required to use to sew the chosen stitch.

10. Snap on your Specialty Candlewicking Foot 413162345.


11. Thread with 40 wt. rayon thread on top and bobbin thread in the bobbin.

12. Mark six lines 1" apart on fabric. Place one layer of INSPIRA® Tear-A-Way stabilizer underneath the fabric

13. On the first line, stitch a row of candlewicking stitches.


14. Select another candlewicking stitch (1 through 10) and stitch on the sixth line.


15. Touch .


16. Touch Stitch 16 . The Three Hole Yarn Foot, 413187045, is called for in the pop-up.

17. Thread your Three Hole Yarn Foot with a different color yarn in each of the three holes using the yarn threader provided.

18. Stitch on the second line.






19. Select stitch 17  and stitch on the third line.


20. Select stitch 18  and stitch on the fourth line.

21. Select stitch 19  and stitch on the fifth line.

22. Fold over one end of your fabric to the right side, to form a double 1/2" hem.

23. Touch .

24. Touch Stitch 11,  12 , 13 , 14  or 15 .

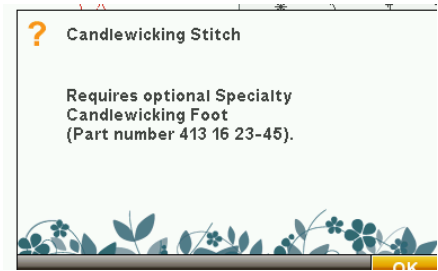

25. Snap on your Left Edge Topstitch Foot 412784245 as directed.
26. Align the edge of the fold in the tunnel on the underside of the foot. Stitch the hem in place.
27. Fold a piece of INSPIRA<sup>®</sup> Aqua-Magic stabilizer so there are four layers, about 1” wide. Stitch #16 on the Aqua-Magic. Rinse out the stabilizer and you will have a free standing cord!

