


Mitering Corners with the Minute Miter and the Husqvarna Viking 1/2" Bias Binder

1. To miter the binding corners, using the Minute Miter: Snap the bias binding foot onto your Husqvarna Viking and slide the bias tape into the slot on the foot. (See instructions for use in the Accessory User's Guide.) To attach the bias binding, begin at the top left corner and attach the top edge first. Sew to within 1/4" of the corner and stop.

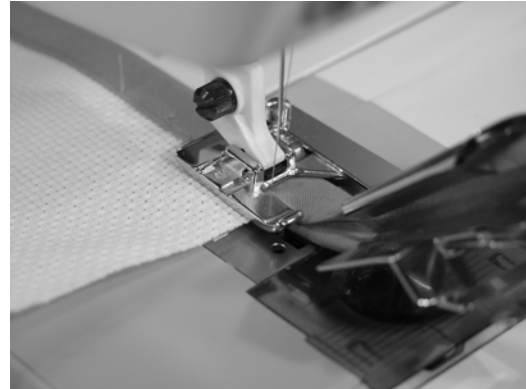


2. Lift the presser foot. Pull the fabric and binding about 6" to the back of the machine. Slide on the Minute Miter onto the corner as shown.

3. Pivot the fabric 90 degrees, place the bias binding over the corner, forming a miter as shown, and pin.



4. Remove the Minute Miter, and pin the miter in place.

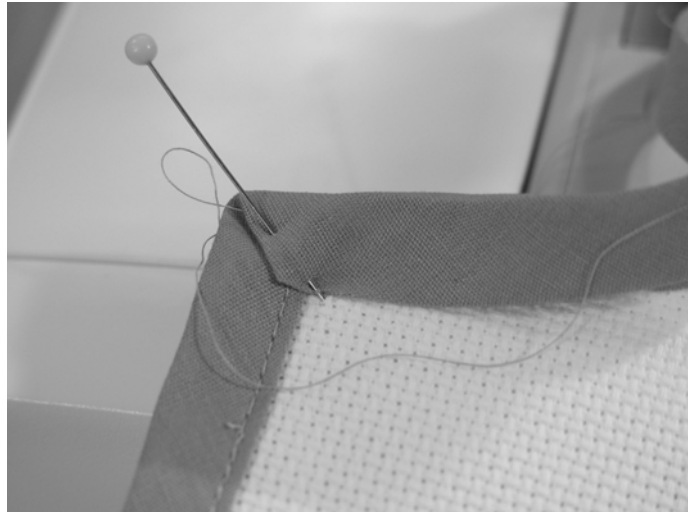

5. Carefully pull the binding back into the foot from the front, to reinsert the fabric back into the binder. Be sure that the fabric is in place, and the underneath part of the binding is in order.

6. Resume stitching. Repeat for the remaining corners.

