

Chevron Bag!


By Marie Duncan

Make a fun quilted chevron bag using the curlyque design that is the free, monthly design for August 2013. It's perfect for the back to school crowd or just for everyday toting your goodies around!

The border design is the 2013 August Monthly Design, #200091038. It is free for the month of June 2013 from www.myembroideries.com.

To download the design, go to the HUSQVARNA VIKING® website. Click on **Be Inspired/Inspiration** and **Free Monthly Projects**. Click on the **Download Design** button to access the design. When you get to the checkout, enter the coupon code **free2013aug** in the box. Click **Apply**.

After August 2013, the design will be available for purchase on www.myembroideries.com.

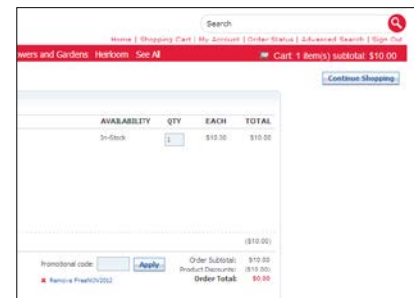

Sewing Supplies:

- Interchangeable Dual Feed 920219096
- Changeable 1/4" Guide Foot 413238345
- Changeable Quilters Guide Foot 413155545
- Clear 1/4" Piecing Foot w/guide 412927445
- Endless Embroidery Hoop II 920310096
- INSPIRA® embroidery needle, size 90 620071896
- INSPIRA® Tear-A-Way stabilizer 620112196
- INSPIRA® In-R-Form batting alternative 36" x 58" 620131596
- 1/4 yard EACH of four different black and white print cottons
- 1 yard solid cotton for bag and embroidered strip
- Robison-Anton 40 wt. rayon embroidery thread
- Sewing thread
- Bobbin thread
- Fasturn Tube Turner 140000001
- Ruler with 45° mark
- 1/4" wide Steam-A-Seam 2

Cut:

From black and white print cottons

- Four 1½” long x width of fabric strips from EACH of the four prints


From solid cotton:

- One piece 8” long x width of fabric for embroidery
- One piece 11” long x 14” wide for flap lining
- Four pieces 11” long x 14” wide for outer bag and lining
- Two pieces 2” long x width of fabric for strap
- Two pieces 7½” long x 8” wide for pocket lining

From In-R-Form batting alternative:


- One piece 11” long x 14” wide for flap
- Two pieces 11” long x 14” wide for outer bag
- One piece 2” x 45” for strap

Embroider:

1. Set up machine for embroidery and load design **200091038**.
2. Insert a size 90 embroidery needle.
3. Thread with Robison-Anton 40 wt. rayon thread on top and bobbin thread in the bobbin.
4. Slide on your Endless Hoop II.
5. Place the 8” wide fabric strip with Tear-A-Way stabilizer into the hoop aligning the right side of the fabric and stabilizer with the ledge of the hoop. Slide the fabric forward as far as possible, but filling the hoop. Don’t have an empty space at the end.
6. This design is a border that can be used to finish off an edge, so the first color stitches the alignment mark, then straight stitches along the edge of the design. This enables you to cut away the fabric, so that the curlycue border will be along the edge. We are not using it this way, so touch . This cancels the color stops.
7. Embroider the first repeat of the design.
8. When it is complete, Touch **OK** to close the “Embroidery is finished” window.
9. Advance to stitch 3 which is the corner of the alignment marks.
10. Open the hoop.
11. Slide the fabric away from you until the needle is over the stitched registration mark. Lower the needle into the corner of the mark. Ensure that the fabric and stabilizer edges are aligned with the ledge and close the hoop. Raise the needle.

12. Advance past the registration marks (that way you have less to rip out) and begin the embroidery.
13. Repeat until you have 6 repeats of the design.

Make the Chevron Panel:

1. Toggle to **Sewing Mode** .

2. Select stitch **A1:2** .

3. Snap on your Clear 1/4" Piecing Foot w/Guide.

4. Thread with sewing thread top and bobbin.

5. Sort the cut strips according to the print.

6. Select two different 1 1/2" wide print strips and place them right sides together. Sew with a 1/4" seam.



7. Add one strip of each of the remaining two prints as desired, creating a unit with four strips.

8. Sew the remaining strips together in the same way to create three more units.


9. Sew two units together to create two sets of eight strips.

10. Press all the seam allowances in one direction.

11. Place the strips sets right sides together.

12. Cut at a 45° angle as shown.

13. Then, following that angle, cut six 1 1/2" double diagonal strips. Save the remaining fabric, we will use it for the pockets.

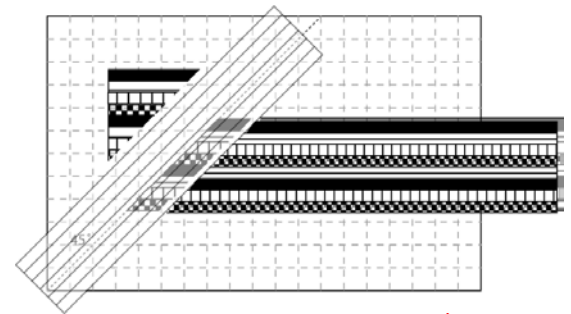

14. You have a "right" set and a "left" set; together they create the chevron.

15. Place a "right" and a "left" strip right sides together. Sew with the seam allowance pointing towards you and the point up as shown. This will ensure that they are all the same.



16. After you have sewn all the strips sets, join them together to form the chevron panel.

17. Trim the panel to 10" x 11".

18. Trim your embroidered strip $\frac{3}{4}$ " from the embroidery on each long edge and $\frac{3}{4}$ " from the embroidery on the two short edges.
19. Fold the embroidered panel in half, matching the short ends and mark the center.
20. Mark the center of the 11" side of the chevron.
21. Match the two marks, placing the embroidered strip and the chevron right sides together. Pin.
22. Mark and pin $\frac{1}{4}$ " in from each end of the chevron panel.
23. Stitch between the marks back tacking at each end.
24. Fold the embroidered strip back on itself as shown, matching the embroidery. Using a ruler with 45° marking, draw a line for the miter starting at the end of the stitching and extending through the embroidered border. Pin. Repeat for second side.
25. Stitch the mitered seams.
26. Trim the fabric $\frac{1}{4}$ " from the stitching line.
27. Stitch the remaining seams attaching the border to the sides of the chevron panel.
28. Place the chevron panel on top of the 11" x 14" piece of In-R-Form with the right side facing out. Place flap lining piece on top with right sides together.
29. Attach your Interchangeable Dual Feed.
30. Snap on your Changeable $\frac{1}{4}$ " Guide Foot.
31. Stitch the side and bottom seams.
32. Clip the corners, turn and press.
33. Align the flange of the foot with the edge of the fabric and topstitch around the three sewn sides of the flap.
34. Stitch Close to the raw edges on the open top, securing the fabric layers together.



Pockets:

1. From pieced scraps, cut two rectangles $7\frac{1}{2}$ " long x 8" wide for pockets.
2. Place right sides together with pocket lining and stitch around the pocket leaving a 3" opening on one $7\frac{1}{2}$ " edge.

3. Clip the corners, turn and press.
4. Insert ¼” Steam-A-Seam 2 into the opening and press with steam to fuse.

Quilt the Bag:

1. Place one 11” long x 14” wide bag fabric on top of the same size piece of In-R-Form with the right side facing out.
2. Using a fabric marking pen or chalk, mark a line 1¼” in from the edge, parallel to the 11” side.
3. Mark lines 1” apart across the fabric.
4. Snap on your Changeable Quilters Guide Foot.
5. Stitch the channel quilting.
6. Repeat with the other 11” x 14” pieces.

Put it all together

1. Snap on your Changeable ¼” Guide Foot.
2. Place the two strap pieces right sides together on top of the In-R-Form batting alternative.
3. Stitch along each edge.
4. Turn using your Fasturn Tube turner.
5. Topstitch along each edge aligning the flange of the foot with the edge of the strap.
6. Place the channel quilted pieces right sides together. Stitch the side and bottom seams (the channel quilting runs vertically) .
7. Place the chevron flap right sides together with the bag back. Insert the strap ends matching the raw edges and stitch in place.
8. Turn the bag right side out leaving the flap right sides together against the bag.
9. Center the pockets on the lining pieces. The 15” edges are the bag top and bottom.
10. Sew the pockets, leaving the pocket top edge open.
11. Stitch the side seams of the bag lining, turning the corner onto the bottom but stopping 1” into the bottom seam. Because of the stiffness of the bag, the majority of the bottom seam will be left open for turning.

12. Place the bag inside the lining, right sides together. The strap and flap should be between the layers.
13. Stitch around the top of the bag.
14. Turn the bag through the opening in the lining.
15. Turn under the raw edges and topstitch the bottom opening closed.
16. Topstitch around the front top edge of the bag to keep the lining in place. The flap will take care of the top back of the bag.

Fill your new bag with all your goodies, and you are ready to go!

