





DESIGNER DIAMOND™ Technique Step by Step #23 DESIGNER™ Cutwork Bread Cloth

Make this reversible cutwork cloth to line a basket of bread or rolls. The designs are from the CD included with the Cutwork Needle Kit.

Sewing Supplies:

- 150mm x 150mm Do All Quilter's Hoop
- 22" square of linen cut on grain
- INSPIRA® Aqua-Magic stabilizer
- 40 wt. Robison Anton rayon thread
- Liquid seam sealant



1. Transfer designs 1  and 2  from your Cutwork Needle Kit CD onto your USB Embroidery Stick.

2. Touch  to toggle to embroidery.

3. Touch Start Menu .


4. Touch File Manager .

5. Touch External Devices .

6. Select your USB Stick.


7. Select designs 1 and 2.


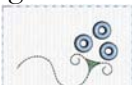
8. Touch .


9. Touch .


10. Select 150mm x 150mm Do All Quilter's Hoop.


11. Touch .


12. Touch  to turn on the background grid.

13. With design 1  in the center of the hoop, move design 2  to the lower right hand corner, just outside the hoop.


14. Touch  to bring the design "just" inside the hoop.

15. With the design still highlighted, touch .

16. Touch .

17. Touch  to rotate the design 90°.



18. Touch  and drag the design to the lower right corner, just outside the hoop.

19. Touch  to bring the design "just" inside the hoop.

20. Repeat one more time, to bring the design into the upper right corner of the screen.

21. To maintain the stability of the fabric with all the cutting, do not Color Block Sort or Color Block Merge this design.

22. Hoop fabric with INSPIRA® Aqua Magic stabilizer.

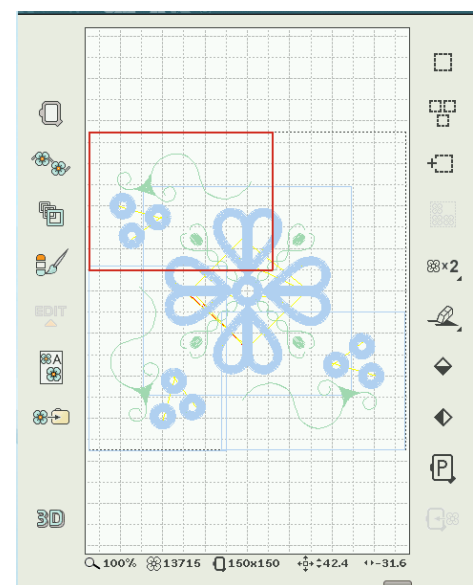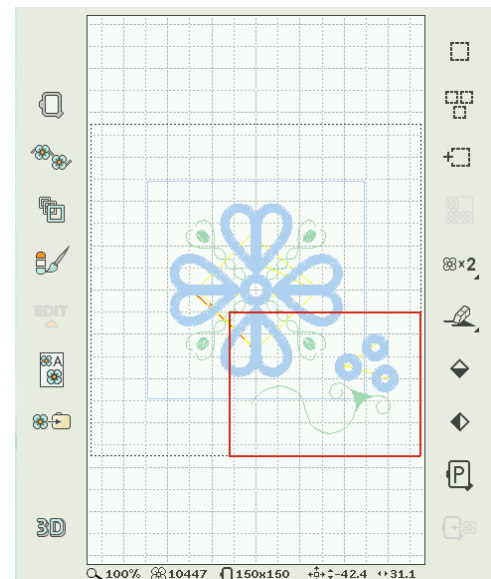


23. Thread with the lighter blue 40 wt. rayon thread on top and bobbin thread in the bobbin.
24. Hoop your 22” square of linen in the lower left hand corner, as close to the edge of the fabric as possible.
25. Embroider the first color.
26. Following the instructions in the DESIGNER DIAMOND™ Technique Studio #23 Step by Step, embroider the cutwork design. Follow the tips below for this combined design:
 - Before beginning to embroider, bring up the bobbin thread tail but taking one full stitch. After your embroidery stitches a few stitches, touch **START** and trim the thread tails.
 - After the first color is stitched, remove the hoop from your DESIGNER DIAMOND™ sewing and embroidery machine and “clean up” the back. Clip all the bobbin threads that have carried across the design. Do this after each design.
 - After color 6 when the first center design is complete, stop, remove the hoop and take out the basting. Trim the extra Aqua-Magic stabilizer away.
 - Repeat after each of the other corner designs.


Sew:



1. Remove the fabric from the hoop.
2. Trim away the excess Aqua-Magic outside the designs.
3. Using your Pictogram Pen, begin in the corner where the embroidery is and mark a line 1¼” from the edge. Repeat on both edges that adjoin the embroidery.
4. Beginning at the corner where the embroidery is, mark on the line every 1¼” as shown.
5. Continue the markings around the other two sides.
6. Remain threaded with matching 40 wt. Robison Anton rayon thread top and bobbin.

7. Touch  to toggle to Sewing.

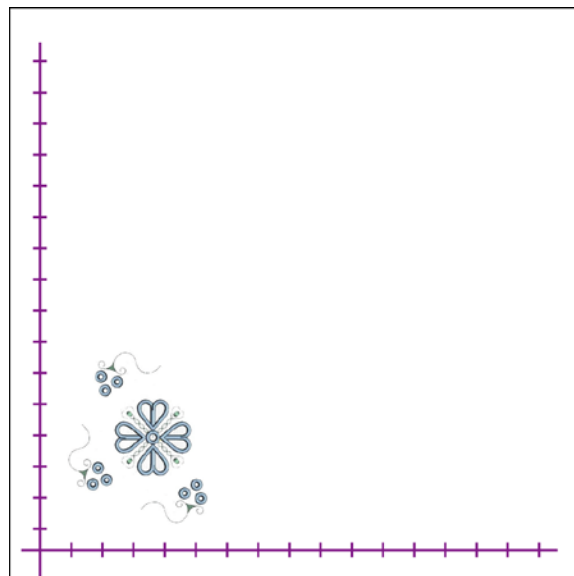


8. Touch Start Menu .

9. Touch  the Scallop Menu.




10. Touch , then select H2:35 .

11. Cut a strip of INSPIRA® Aqua-Magic stabilizer 22" x 3" in half lengthwise. Place under the fabric edge.

12. Touch . Beginning stitching on one of your marks at the corner. Be sure that you end on your marked line. Touch  and stitch the next scallop. Repeat, touching  after each stitch is completed. While this is a bit tedious, it will result in perfect spacing.

13. Select H2:2 . Adjust the stitch length to 40.0 and the stitch width to 11.0.

14. Carefully, trim the linen away from the outside of the stitching. Leave the stabilizer intact.

15. Stitch slowly, and touch  after each stitch repeat. The stitching will stitch over the straight stitching and the cut edge.

16. When your stitching is complete, carefully, put fray blocking liquid over the cut edge in the corner. Be careful not to get it on the stabilizer, as it will prevent it from washing away. Just put a drop on the corner of the linen. Allow to dry.

17. Rinse out the stabilizer in warm water.

18. Now, get baking those rolls to go in your basket!