



*Designer Topaz™*

Patchwork Sheer Throw

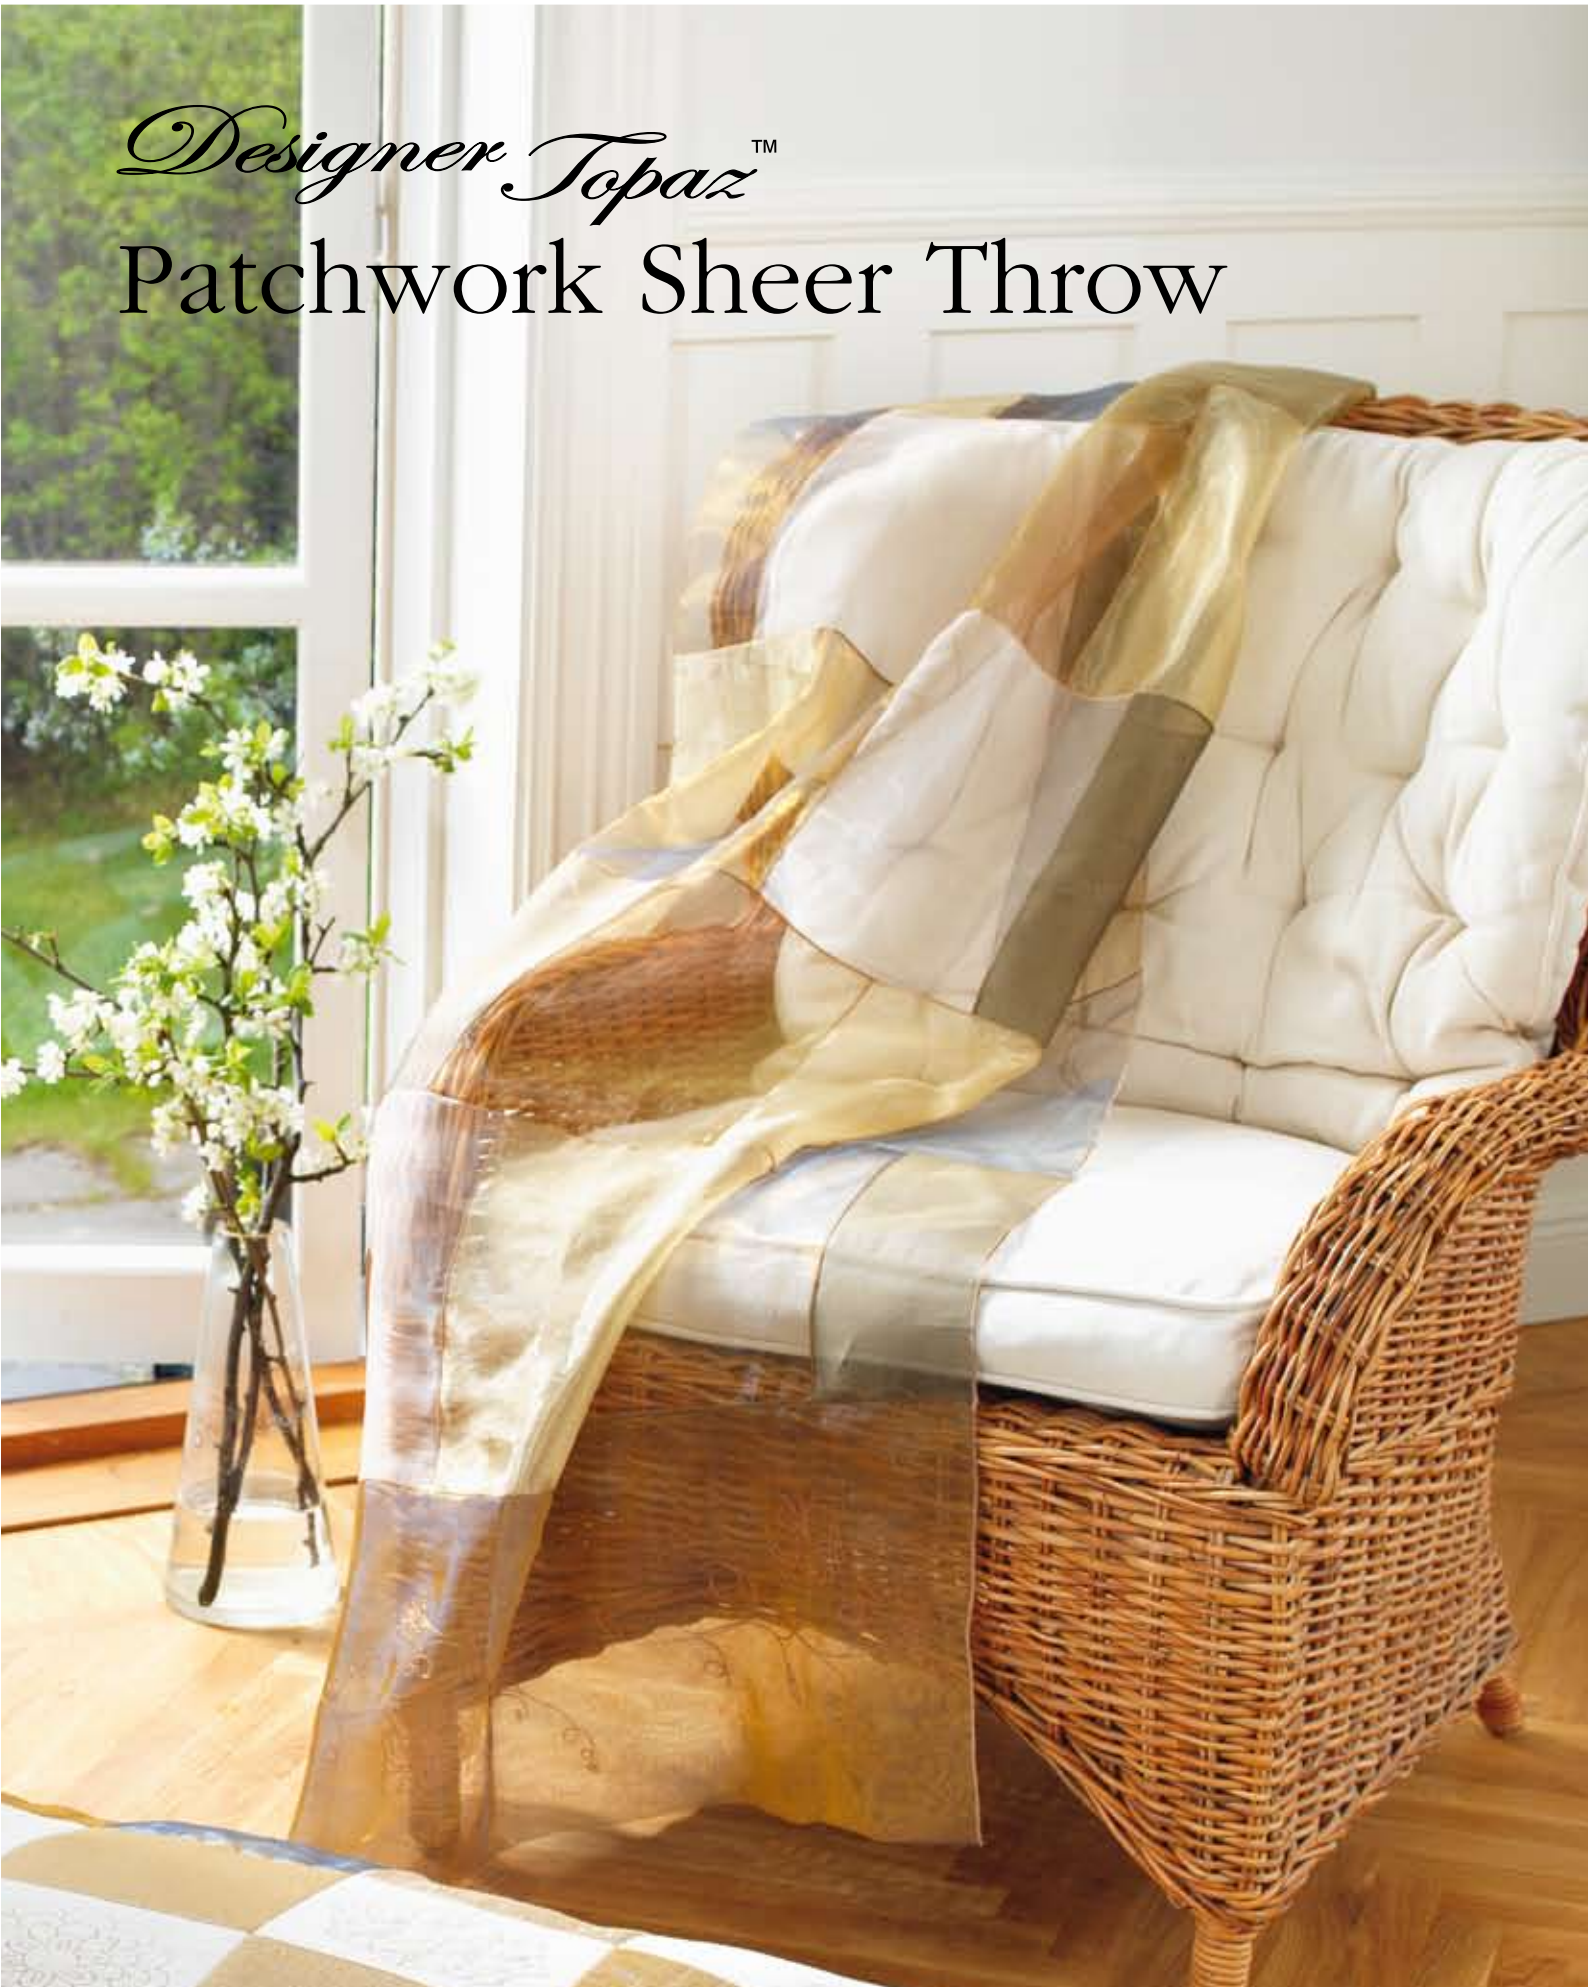

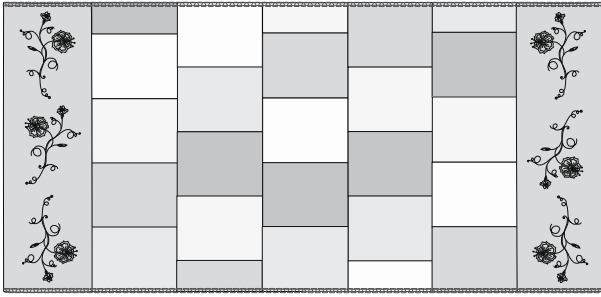

Sewing Level 2

### Sewing supplies

- ❖ HUSQVARNA VIKING® DESIGNER TOPAZ™
- ❖ HUSQVARNA VIKING® Huskylock s15
- ❖ Five 1/3 yard pieces of 55" (30cm x 140cm) wide Organza fabric for quilt squares in five different brown colors (Total 5- 1/3 yard pieces)
- ❖ 2/3 yard of 55" (60cm x 140 cm) wide Gold organza fabric for border
- ❖ Pins
- ❖ Embroidery thread
- ❖ Embroidery bobbin thread
- ❖ Cutting mat

### Husqvarna Viking® Accessories

- Pictogram Pen (412 08 38-48)
- DESIGNER™ Crown Hoop 260 x 200mm (4131165-01)
- 4D Organizer
- HUSQVARNA VIKING® Ruler (412 66 17 – 01)
- Olfa® Ergonomic rotary cutter (415 16 42- 01)
- 48"x13" (120cm x 33cm) Ultra Solvy Sulky Water Soluble stabilizer 140002165 (USA), 5000031-96 (Europe)

You will find these and many other accessories in your HUSQVARNA VIKING® Accessory User's Guide or on the web site [www.husqvarnaviking.com](http://www.husqvarnaviking.com), for purchase at your nearest HUSQVARNA VIKING® Dealer.

### Cut

1/4" (6mm) seam allowance included in all measurement

#### From Organza fabric

- Quilt Square – five pieces 8 1/2"x 12" (22cm x 30cm) of each color.

#### From Gold organza fabric

- Quilt Border – two pieces 12"x 36" (30cm x 90cm)


Tip! Cut and trim all the organza pieces with rotary cutter, ruler and cutting mat to get a nice and straight edge.

### Sew

Place one piece of each of the five organza squares of each color in the first row.




Continue with 4 rows of organza square blocks and vary the colors on each row. Make sure to mark each row with correct number to keep all rows in the right order.

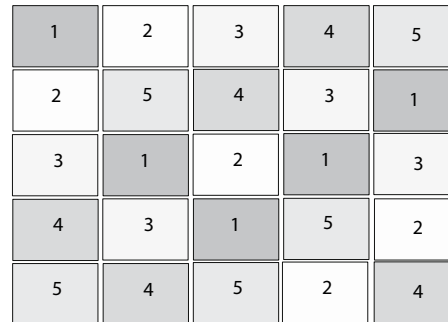


Set the Huskylock machine for a 3 thread wrap, wide overlock. Thread with embroidery thread.

Place two pieces of organza squares right sides together. Sew the pieces together with an overlock seam. Sew another piece next to the second square and continue until you have all five squares in one strip.

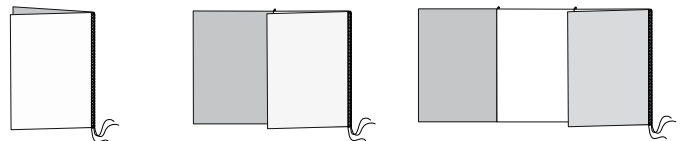


Continue in the same way to create a total of 5 quilt strips. Press the seam allowances in the same direction

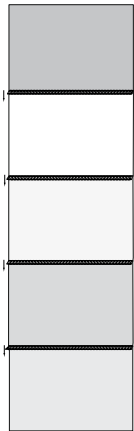


Arrange all 5 strips as follows: Place all 5 strips on a flat surface with the right side up and in the right order 1 to 5.

Adjust strip 1, 3 and 5 a half square to the right. (Strip 2 and 4 will not change).

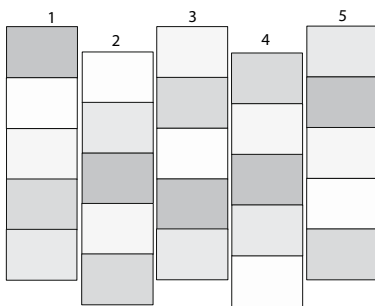


To match all the strips in the right place mark with a pictogram pen lines on each side of the strips.

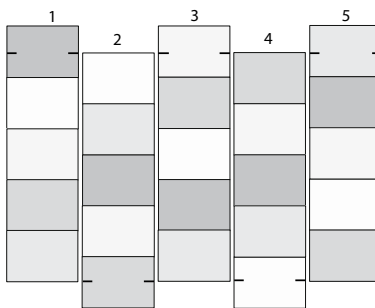


Place strip 1 and 2 right side together. Serge the strips together. Continue until all strips are in one piece. Press the seam allowance in one direction.

Trim the sheer patchwork piece to 36" x 55" (90cm x 140cm).

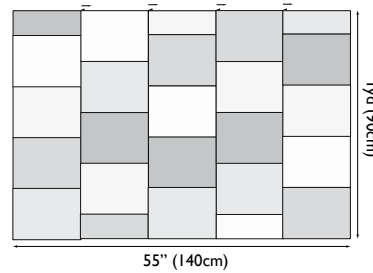


**Border:**

Fold one of border piece in half, wrong side together, lengthwise. Press the fold. Place open edge of the border on the short side of the sheer patchwork and pin in place. Sew the border in place with the 3 thread wrap, wide overlock. Repeat on the other short side in the same way.

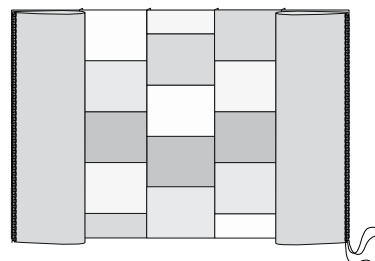


Press the seam allowance toward the border. Trim the short edges of the border even with the patchwork. Set the Huskylock machine for a 3 thread wrap, narrow overlock. Thread the Huskylock with embroidery thread. Serge along the long edges of the sheer. Press.

Bring design # 4 into your 4D Embroidery Software and print 3 paper templates of the embroidery for placement of the embroideries on the border. Cut out the designs. Place 3 paper copies on the border and mark the placement.

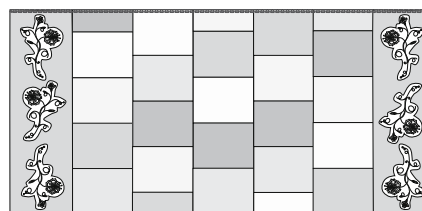

Set your DESIGNER TOPAZ™ sewing and embroidery machine for embroidering. Thread your machine with rayon embroidery thread in the top and bobbin. Snap on the Clear Embroidery Foot “R” to your machine.

Hoop the sheer border in the DESIGNER™ Crown Hoop (260x200mm) with water soluble stabilizer underneath according to illustration.

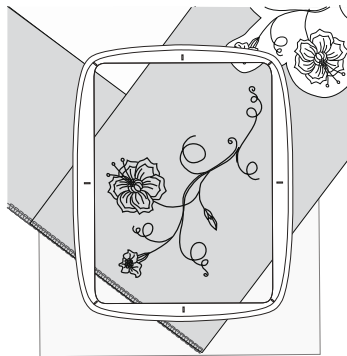

Select design # 4. Touch FIX to baste the fabric to the water soluble stabilizer and embroider the outline design. Continue with two outlines embroidery on the border in the same way.

Repeat with 3 outline designs on the other border in the same way.

When finished rinse the embroidery in lukewarm water to remove the stabilizer. Let dry.