



Denim Jacket

Designed & Created by Lena Mattsson and Karin Larsson

To make this beautiful jacket, use Your favorite jacket pattern. Ours was a fitted style.



Sewing Supplies

- Husqvarna Viking Designer SE
 - Denim fabric, as called for in your pattern
 - Lining, amount: as called for in your pattern
 - Sewing thread
 - 40 wt. embroidery thread, white
- Other supplies: as called for in your pattern


Optional Husqvarna Viking Accessories

- Edge/Joining Foot (412 79 68-45)
- Tear-Away stabilizer™ (141 00 05-43)
- Pictogram Pen (412 08 38-48)

You can find this and many other accessories in the Husqvarna Viking Accessory User's Guide or on our web site www.husqvarnaviking.com, for purchase at your nearest Husqvarna Viking Dealer.

CUT

Trace the pattern in your size on to pattern paper and cut out. Divide the front piece in two just beneath the bust. Divide the sleeve piece in two, in line with the front. *Illustration A.*

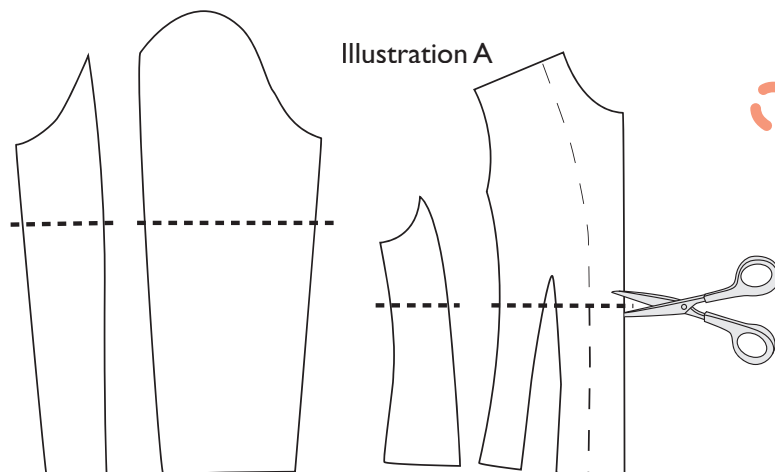

Place the pattern pieces on the denim fabric and cut out. Add seam allowance at the divided sides and add 3" (7 cm) at the center front on the lower piece (to be able to hoop the fabric for embroidery).

SEW

To embroider along the center front edge: Mark the center front line on the lower part of the front piece with a pictogram pen. Hoop the denim fabric with tear away stabilizer underneath, make sure the front line is straight. Slide on the embroidery unit. Thread with white embroidery thread on top and bobbin thread in the bobbin. Select design 36 that comes with your Designer SE. Select 5 of this design and arrange them as illustrated. Embroider close to the center front marking. Repeat for the opposite front edge.

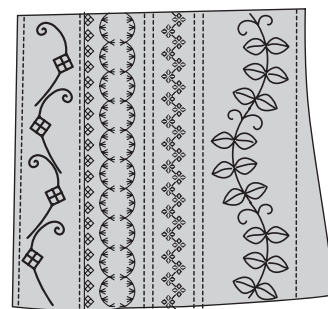
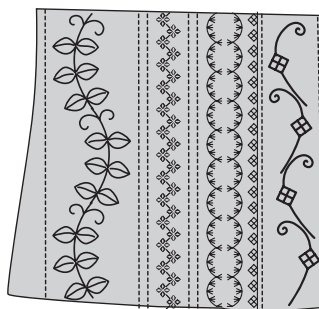


Illustration B

Remove the embroidery unit. Select a decorative stitch of your choice, snap on the recommended presser foot and continue sewing decorative stitches next to the embroidery, all over the lower part of the front piece. Use tear away stabilizer underneath. Here are some of the decorative stitches that we used: N:2:35, E:3:49 + mirror image side to side, N:2:31 and K:1:6. Repeat for the opposite front piece and both sleeves. *Illustration B.*

When finished, tear away the stabilizer and press. Pin the lower and upper front piece right sides together. Snap on presser foot A. Rethread with sewing thread on top and in the bobbin. Sew the pieces together. Repeat for the opposite front side and both sleeves. Press the seam allowances downwards. Snap on Edge/Joining Foot, adjust the needle position a few steps to the right and topstitch just beneath the seam between the parts that were divided. Let the guide on the presser foot ride in the ditch. Repeat on all parts. *Illustration C.*

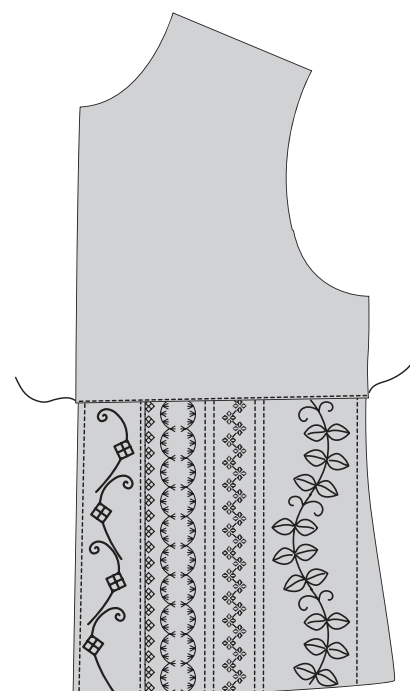


Illustration C

Continue sewing your jacket according to your pattern instruction.



 **Husqvarna**

VIKING