

# Designer I Update 1.6

## Bartacks


Secure elastic ends, drapery pleats, belt loops, and pocket corners with the same look as ready-to-wear.

**Fabric:** Woven heavy



**Touch:** Woven heavy, Menu A, Utility Stitches, Touch Stitch A32 / A36.

**Snap on:** Presser Foot B as recommended.

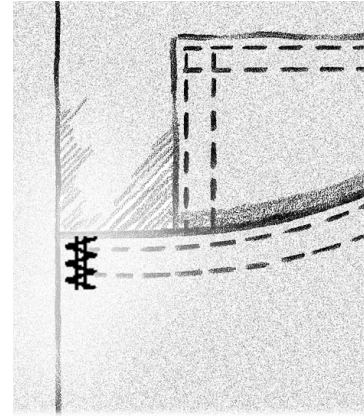



**Use:** Size 80 needle as recommended





### Sew, A32:

- Place fabric in position under presser foot
- Touch Pivot  and adjust fabric if necessary. Step on the foot control, the Sensor Foot lowers automatically, and stitch.
- Touch . The machine will stop automatically when the stitch is completed. The machine will automatically tie-off and cut the threads.

### Sew, A36:



- Place fabric in position under presser foot
- Touch Pivot  and adjust fabric if necessary. Step on the foot control, the Sensor Foot lowers automatically, and stitch. The machine will sew a straight stitch until you touch . Your Designer I will then sew in reverse until you touch  again. Your Designer I will then sew a zig zag, covering the straight stitches until you touch .
- The machine will automatically tie-off and cut the threads.

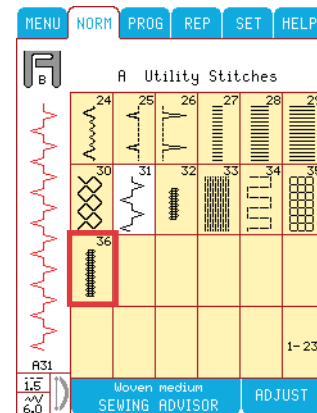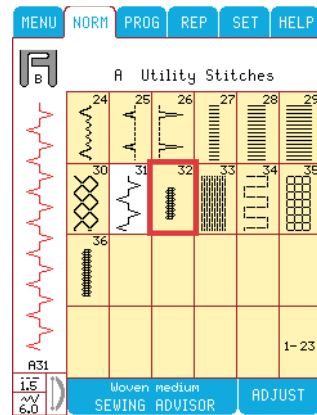

## Quilt Stitches

For Quilt Stitches, touch Menu E.

Stitch E1 sews the stitch 1/4" from the right edge of the presser foot. If you want a handlook quilting stitch, you can use stitch E2. Use stitch E24-26 for stippling sewing. There are also stitches that can be used for Crazy Quilting. The feather stitches (E7-12) are very typical for quilting. Stitches E3-6 are 6-9 mm wide and can be used when channel quilting.

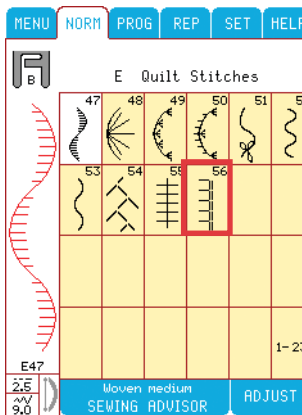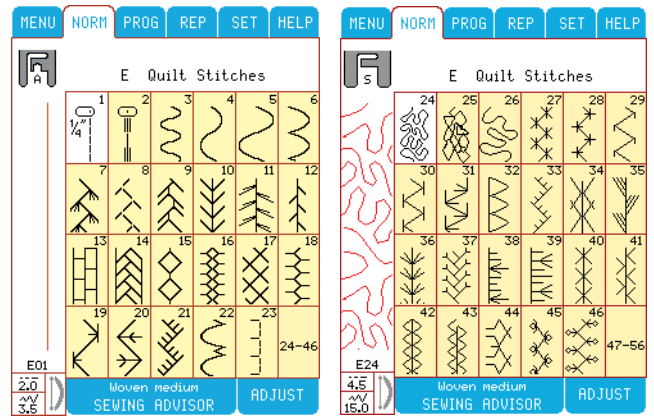

## Scallop Stitches

For Scallop Stitches touch Menu H in the Main Menu.

The scallops 1-13 are Omnimotion scallops and sew up to 25 mm wide. Scallops 16-34 are up to 9mm wide.

