

Angel



Sewing Supplies

- Burda pattern 9986 for dress
- Polyester, viscose or crepe fabric for dress (See cutting instructions)
- 5/8 yd (50 cm) cotton fabric for angel wings.
- 5/8 yd (50 cm) Fusible interfacing
- 1/4 yd (20 cm) silver fabric
- 2 1/2 yd (2.20 m) Packaged folded silver bias binding strip.
- Sewing thread
- 100" (2.50 m) Steel wire

Optional:

- Husqvarna Viking Edge Joining Foot (412 28 02-45)
- Fasturn (412 55 08-01)

CUT

Trace the pattern for model B in required size. Measure the length of the child and the length of her arm. Lengthen front and back pieces to a long dress. Lengthen the sleeve to a trumpet sleeve as illustrated. (Illustration A).

Cut the pieces for the dress according to Burda pattern instructions and your own changes. (Exclude pieces 7, 8 for the ruffle on the original pattern).


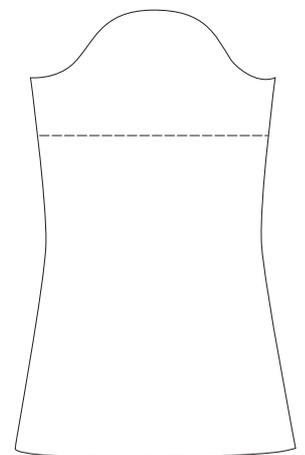


Illustration A

Download the pdf-file with the angel wing and print it out.

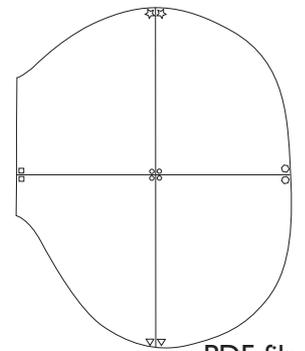

Cut two angel wings of fabric according to the pattern piece. Seam allowance included with 1/4" (6 mm). (Illustration B).

Cut 1 1/2" (4 cm) wide strips in silver fabric, enough for a 100" (2.5 m) long tie band.

Cut one strip 15" x 2 3/8" (38 x 6 cm).

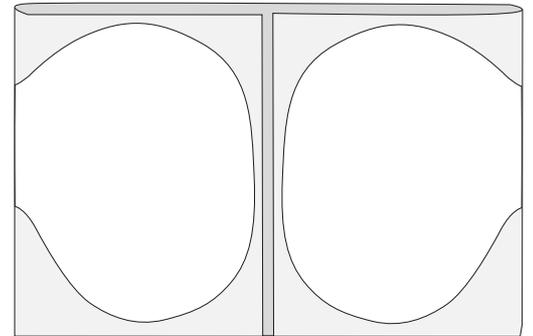


Illustration B

DRESS SEW

Sew the dress according to Burda pattern instructions. Finish the lower edge of the arm and dress with a 1/4" (6 mm) wide double hem.

WINGS

Place back and front pieces wrong sides together. Pin around all sides. Snap on presser foot J. Select a zig zag, length 2.0, width 2.0. Place the steel wire underneath the J foot in the opening and let it be stitched all around the wings for stability. Bend the wire to match the shape of the wing to stitch it to the edge. Be careful not to break the needle. Stop stitching about 4" (10 cm) from where you started. Wrap some tape around the sharp ends of the steel wire to connect the ends. Stitch the last stitches around the wings. (Illustration C).

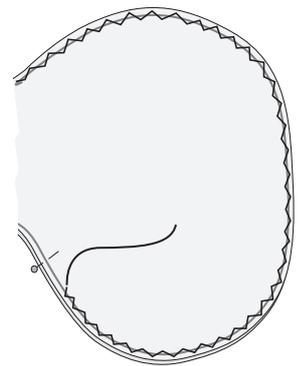


Illustration C

Snap on presser foot A. Select a straight stitch, stitch length 3.0. Fold the bias binding strip around the wing edge and bind the wings. Be careful to not stitch in the steel wire and break the needle!

Fold the 2 3/8" x 15" (6 x 38 cm) strip lengthwise right sides together. Stitch along the side. Use a Fasturn and turn strip right side out.

Place the strip on the front side between the wings leaving approx 4" (10 cm) above the wings and 3" (7.5 cm) underneath. Snap on presser foot D or the optional Edge/Joining Foot. With right needle position straight stitch, topstitch the band to the wings. Fold the steel wire to a loop. (Tape the sharp ends!) Insert in the band to stabilize the wings. (Illustration D)

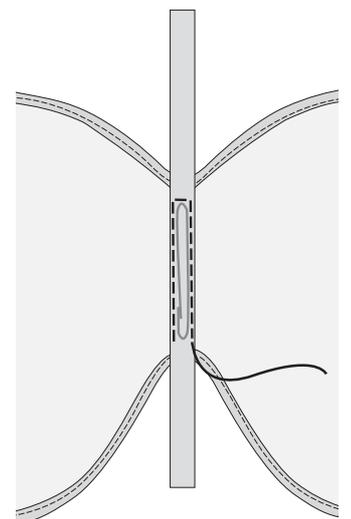


Illustration D

Fold the band ends around the edge as illustrated to make a loop for the tieband. Secure the loops with a few stitches on the back side. (Illustration E).

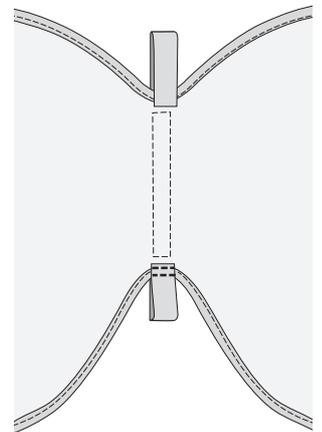


Illustration E

Snap on the D-Foot or the optional Edge/Joining Foot. Select right needle position straight stitch. Fold and press the sides of the 1" (4 cm) strip to the middle, then fold it again to create four layers of fabric to a 3/8" (1 cm) wide, 100" (2.50 m) long waist band. Topstitch the edges. (Illustration F).

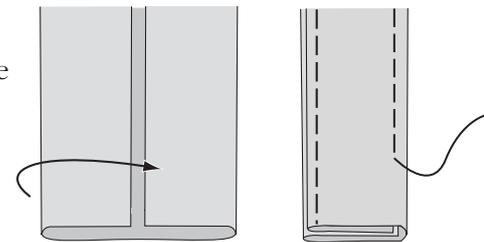


Illustration F

Insert the band in the upper loop of the wing. Fasten the band centered in the loop with a few stitches and in the wings. Fold the bands upwards and secure with a few stitches as illustrated. (Illustration G).

Place the wings on the back of "little angel" with the tie bands over the shoulders. Cross on the front and insert the ends in the lower loop on the wings on the back. Tie up at the front with a bow.


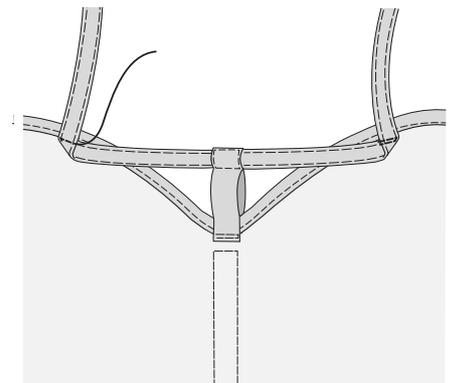


Illustration G




 **Husqvarna**


VIKING

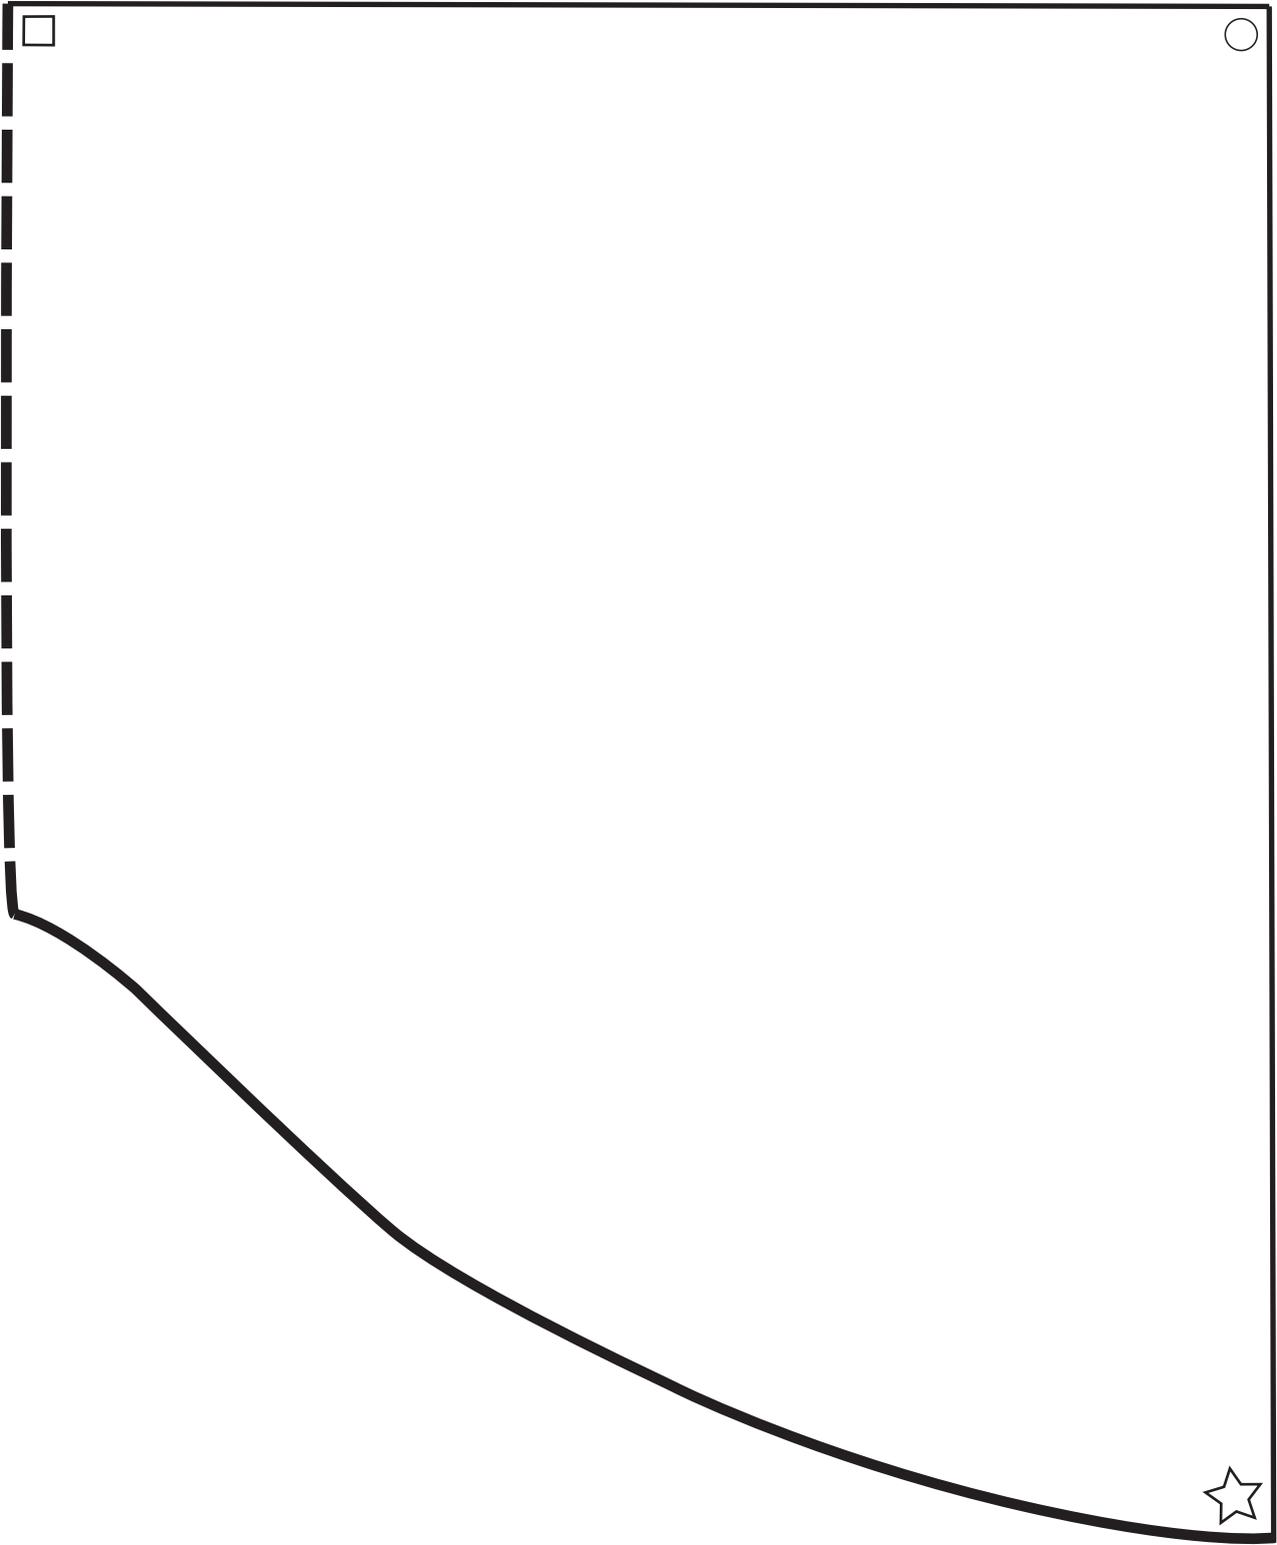


PATTERN PIECE WING I

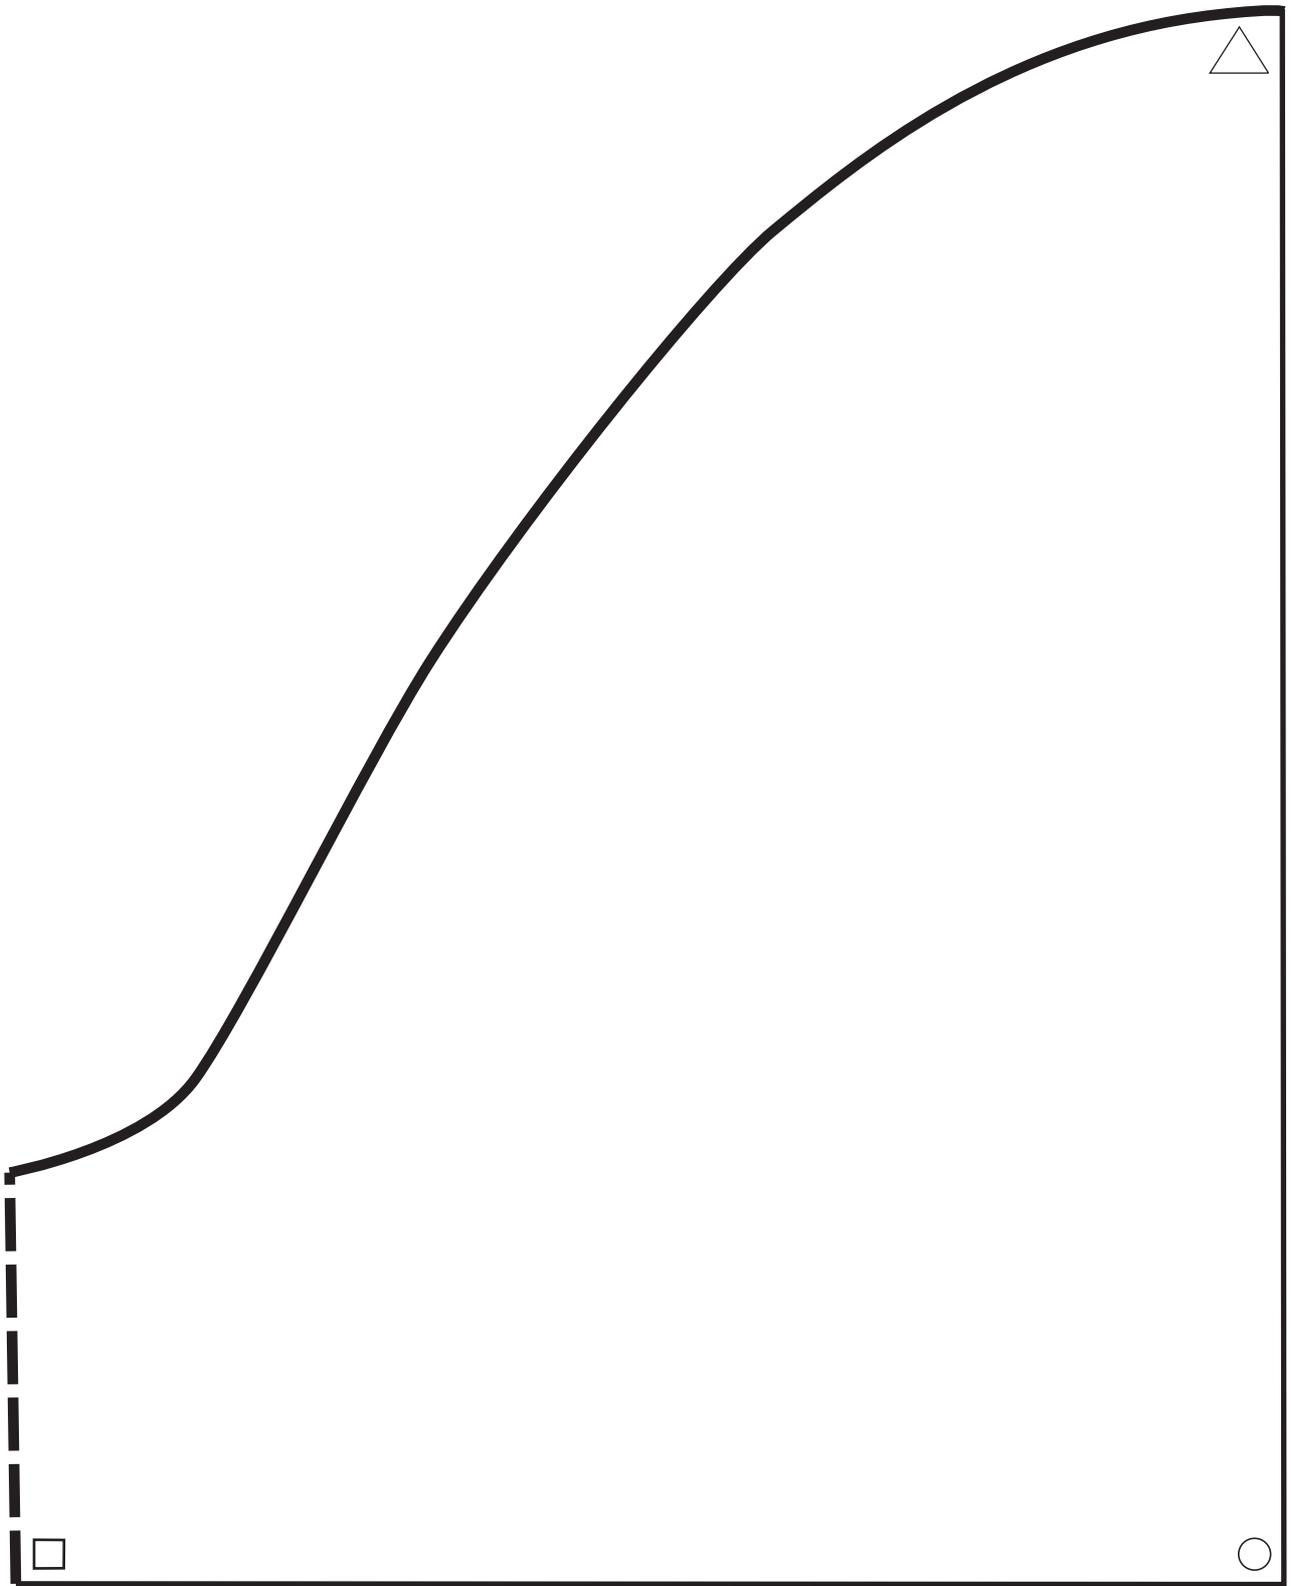

PATTERN PIECE WING 2 PATTERN PIECE WING 1

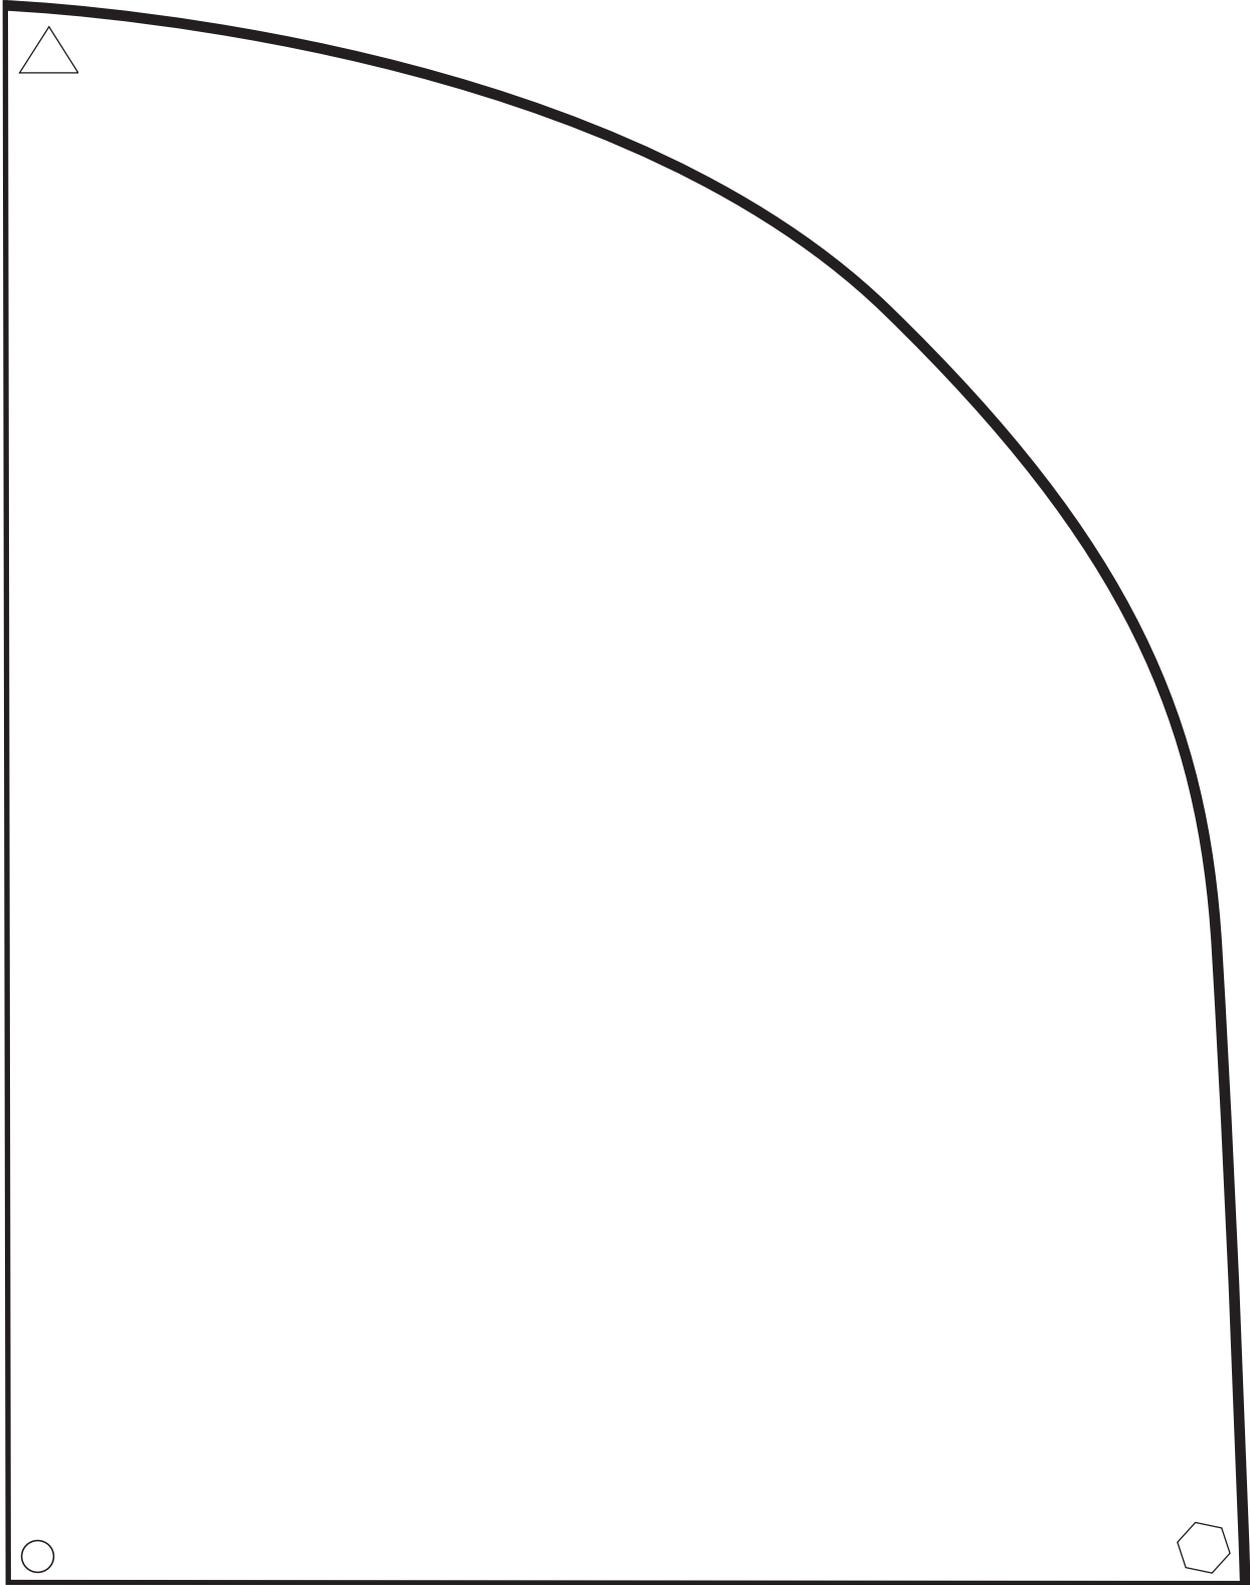

PATTERN PIECE WING 3

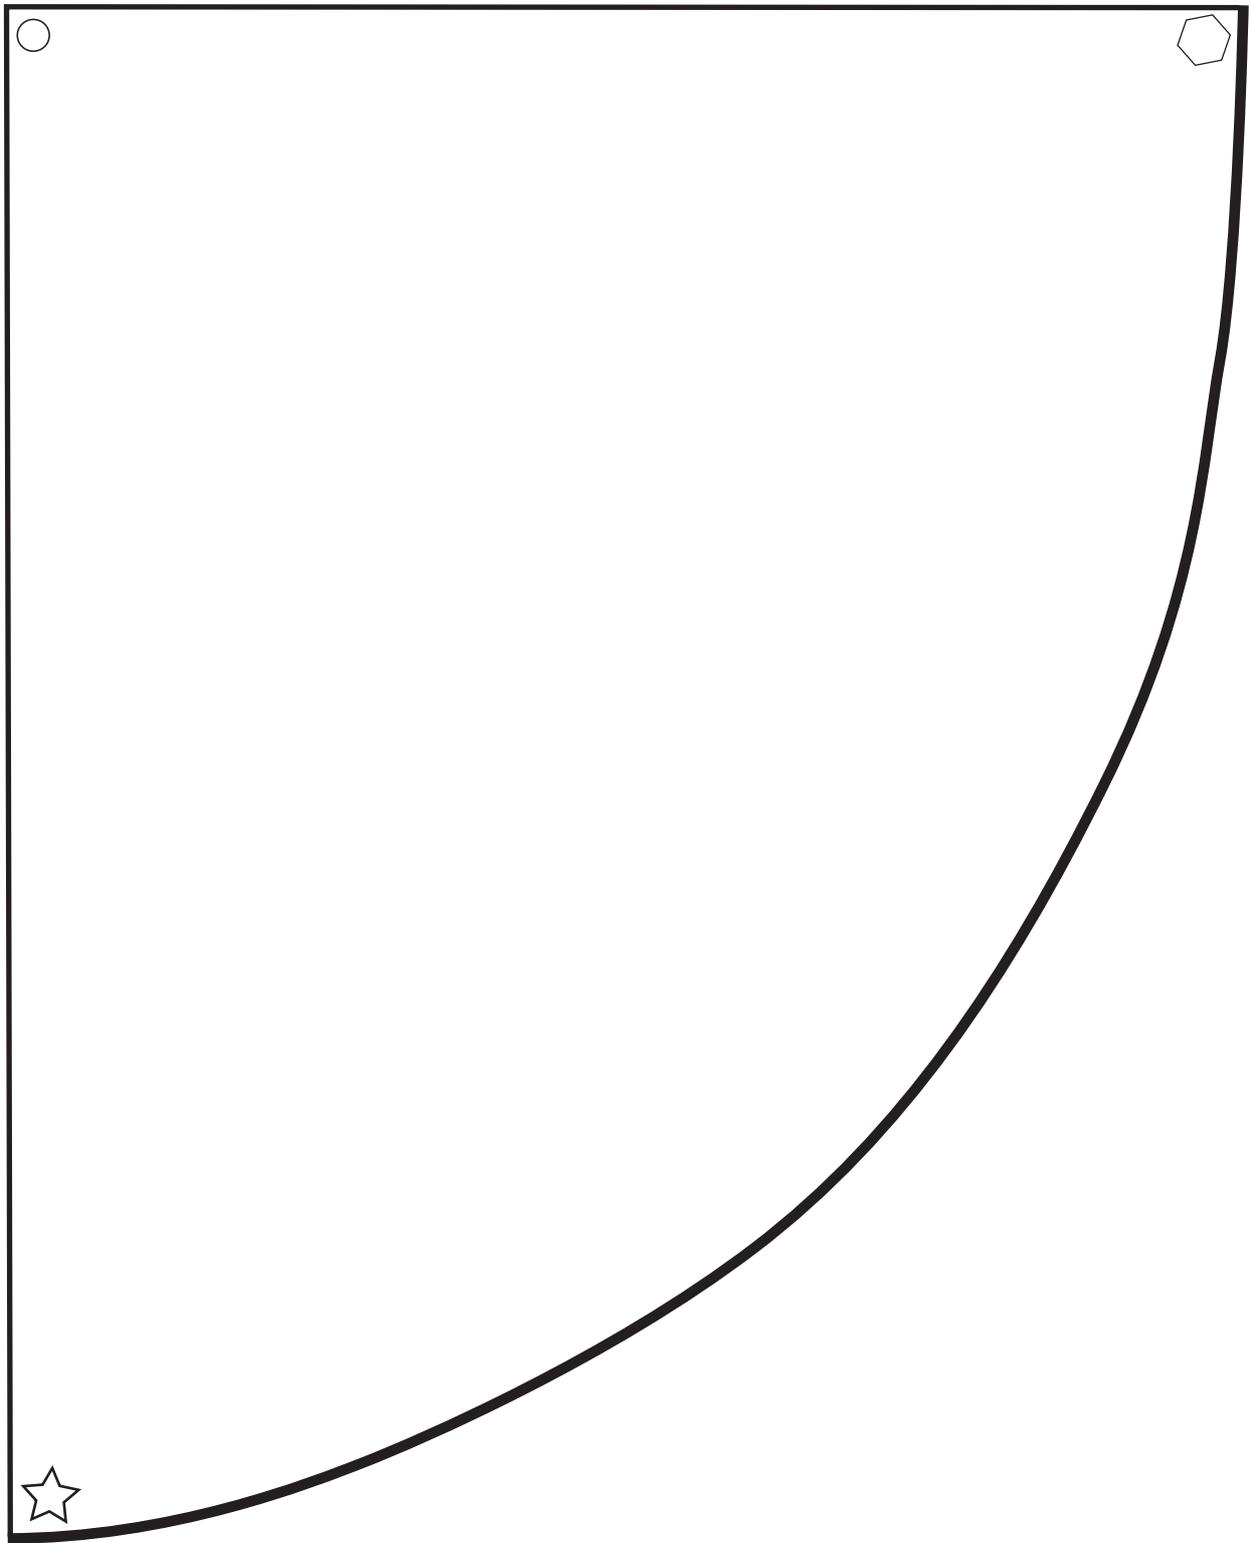

PATTERN PIECEWING 4